



## RVS II and RVS III Radar “Y” Cable

The DICKEY-john “Y” cable is used when there is more than one console connected to a RVS II or RVS III Radar Ground Speed Sensor.

DICKEY-john consoles contain a power lead that supplies DC power to the radar ground speed sensor. The “Y” cable interrupts the DC power lead of the second console to eliminate any potential power line conflicts to the secondary console.

### Cable Tag A

Cable Tag A connects to the master console. The master console must be turned ON to power the radar ground speed sensor.

**Figure 1**

### “Y” Cable Installation

