



DICKY-john[®]
A DIVISION OF TSI[®]



Operator's Manual

GAC[™] 2700-LF
Moisture Tester

CONTENTS

SAFETY NOTICES	3
Description of Caution/Warning Symbols	3
Liability	4
INTRODUCTION	5
Accessories	5
Unit Overview	5
Features	6
Specifications	6
Grain Calibrations	6
Regulatory Compliance Information	7
External Communication Connections	8
Unpacking	8
Packing List	9
Setting up the Instrument	9
Initial Setup	11
Conducting Grain Analyses	12
NAVIGATION	13
Using External Devices	14
On-Screen Keyboard	15
Touch Screen Button Functions	15
ANALYSIS RESULTS	17
AUDIT TRAIL	19
CALIBRATIONS	21
SETTINGS	24
Languages	25
Samples/Results	26
Units	28
Power Management	29
Printers	30
Setting Up A USB Printer	33
Date/Time	34
Owner Information	35
Rapid Analysis Mode	36
USERS/PASSWORDS	38
Users	39
Roles	41
Password Policy Menu	42
Login Settings Menu	44
DEVICE INFORMATION	45
Update Instrument Software	46

DIAGNOSTICS..... 47

CLEANING / MAINTENANCE 48

 External Cleaning..... 49

 Internal Cleaning 49

 Daily Clean Method..... 50

 Extensive Cleaning Method 50

 Cleaning the Temperature Sensor Probe 54

TROUBLESHOOTING 57

DICKEY-john® WARRANTY 59

SAFETY NOTICES

Safety notices are one of the primary ways to call attention to potential hazards. An absence of specific alerts does not mean that there are no safety risks involved.

This product is intended for indoor use.

Description of Caution/Warning Symbols



This Safety Alert Symbol identifies important safety messages in this manual. When you see this symbol, carefully read the message that follows. Be alert to the possibility of personal injury or death.



Use of the word **WARNING** indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



Use of the word **CAUTION** with the Safety Alert Symbol indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.



Use of the word **NOTICE** without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in equipment damage.

DISCLAIMER

DICKEY-john® reserves the right to make engineering refinements or procedural changes that may not be reflected in this manual. Material included in this manual is for informational purposes and is subject to change without notice.

Liability

DICKEY-john® designed the GAC™ 2700 moisture tester to measure moisture content in grains, oilseeds, and other products. We rigorously test and calibrate each instrument before it leaves the factory. Use of the instrument in the field, however, is subject to environmental and operating conditions beyond our control. Dickey-john® disclaims all liability for damages resulting from environmental and operating conditions beyond our control and for any damages that might follow incorrect results due to those environmental or operational conditions. **IN NO EVENT SHALL DICKEY-JOHN OR ANY OF ITS AFFILIATES, OFFICERS, DIRECTORS, SUCCESSORS OR ASSIGNS BE LIABLE FOR ANY DAMAGES WHATSOEVER, INCLUDING SPECIAL, INDIRECT, CONSEQUENTIAL OR INCIDENTAL DAMAGES OR DAMAGES FOR LOSS OF PROFITS, REVENUE, USE, OR DATA AS A RESULT OF CLAIMS, REGARDLESS OF THEORY BROUGHT, ARISING OUT OF OR CONNECTED WITH ANY USE OR RELIANCE ON THE GAC™ 2700 MOISTURE TESTER.**

The operator is responsible for ensuring the results of the testing are as accurate as possible by following approved maintenance procedures on a regular basis, making sure the calibrations are up to date and the latest version is being utilized, by cleaning the instrument and its sensors on a regular and as-needed basis depending on the amount of dust, dirt, and debris encountered in the instrument's use, by monitoring performance using daily check samples and by adhering to the check procedures set forth in the manual. As with any kind of precision instrument, optimal results depend in part on proper cleaning and maintenance.

For questions concerning these issues, refer to the [product warranty](#), or call your Dickey-john® representative.

INTRODUCTION

The DICKEY-john® GAC™ 2700-LF moisture tester quickly tests grain and automatically calculates moisture content, grain temperature, and test weight (bulk density) of the sample. The unit prompts for sample loading, tests the sample, and displays the results.

Accessories

The following list of components are included with the unit and can be ordered as replacement parts:

- Detachable AC power cord p/n 203150002 (US)
- Quick Start Guide p/n 6017233
- Cleaning brush p/n 206410003
- Grain drawer p/n 468071541
- Grain drawer bottomless (optional) p/n 468071542
- Allen wrench (5/32") p/n 468072300

Replacement parts can be obtained by contacting your dealer or distributor.

Unit Overview

1. Power (on/off) button
2. Hopper
3. Hopper full sensors
4. Touch screen display
5. USB connections (2) front (2) back
6. Sample drawer
7. Bubble level
8. Adjustment feet (4)

Figure 1 Overview (Front of Unit)



Features

- Color touch screen display guides users through testing and setup
- Easy-to-use user interface
- Fast, accurate grain analysis
- Rapid Analysis Mode
- Alpha/numeric sample identification with the ability to add an optional external keyboard or bar code reader using USB
- Error messages display when out-of-limits moisture, grain weight, or grain temperature occur
- Customizable work environment
- Optional password protection
- Long-term storage of grain tests
- Large storage to handle complete grain calibration library
- Internal memory capacity to handle future upgrades
- Printing capabilities
- A variety of external communication options

Specifications

- Operating temperature: 36 to 113 degrees F (2 to 45 degrees C)
- Power: 36 W, Max
- Voltage: 100-120, 220 / 230-240 VAC
- Frequency: 60 / 50 Hz
- Humidity: 20 to 90% noncondensing
- Grain temperature: -4 degrees F to +113 degrees F (-20 degrees to +45 degrees C) depending on grain calibrations
- Storage/transit temperature: -4 to +140 degrees F (-20 to +60 degrees C)
- Moisture range: 5 to 45% (grain, calibration, and temperature dependent)
- Approximate Weight: 29 lbs.
- Approximate dimensions: 17"H x 16"W x 14"D
- IP rating: IPX0

Grain Calibrations

Please refer to the DICKEY-john® website for a complete list of calibrations available for the GAC™ 2700-LF moisture tester.

Regulatory Compliance Information

The GAC™ 2700-LF moisture tester is in conformity with the provisions of the following directives and regulations:

Safety

- 2014/35/EU - Low Voltage Directive (LVD)
- EN61010-1:2010+A1:2019 - Safety requirements for electrical equipment for measurement, control, and laboratory use
- UL 61010-1
- CAN/CSA-C22.2 No 61010-1 + Amd 1
- CB – IEC 61010-1:2010/AMD1:2016, Certificate # US/8703/ITS

EMC Emissions

- 2014/30/EU - Electromagnetic Compatibility (EMC) Directive
- EN 61326-1:2021 Class B Group 2 (Electrical Equipment for Measurement, Control, and Laboratory use)
- FCC Part 18.305
- ICES-001:2020 Class B Group 2
- CISPR11, Group 2, Class B
- EN 61000-3-2:2014
- EN 61000-3-3:2013

This device complies with part 18 of the FCC Rules.

EMC Immunity

- 2014/30/EU - Electromagnetic Compatibility (EMC) Directive
- EN 61326-1:2021, Industrial Levels (Electrical equipment for measurement, control, and laboratory use)

The GAC™ 2700-LF moisture tester product series is exempted from the Radio Equipment Directive 2014/53/EU as the RF signal internal to the product is not used for communications. The RF signal power is below the threshold limit to be of concern for EMF Directive 2013/35/EU and therefore no MPE calculation was determined necessary.

RoHS

We, TSI® Incorporated, hereby declare that the GAC™ 2700 product and all product variants are in full compliance with RoHS Directive 2011/65/EU with Amendment EU Directive 2015/863/EU.

WEEE

- 2012/19/EU

The Declaration of Conformity is available upon request.

External Communication Connections

- 4 USB-A ports (2 in front, 2 in back) to connect a keyboard, mouse, printer or flash drive.
- 1 USB-C port to connect the unit to a PC for downloading of software to the device, installing calibrations, or remotely accessing data from the instrument (Authorized Service Centers Only).
- 1 RJ45 Ethernet jack for connection to LAN (Future Availability)
- 1 RS232 serial port printer connection

NOTE: USB, Ethernet, and serial (RS-232) cable lengths are recommended to be less than three meters.

Figure 2 External Communication Connections (Back of Unit)



NOTICE

Be sure to leave enough space around the rear of the instrument to avoid damage to the input power connector and to facilitate easy disconnection of the unit.

Unpacking

Carefully unpack the instrument. Refer to the packing list below to verify that all items are present. Contact DICKEY-john® if items are missing or broken.

Retain the packaging for use when shipping the instrument; use of other packaging for shipment may result in damage to the instrument.

Packing List

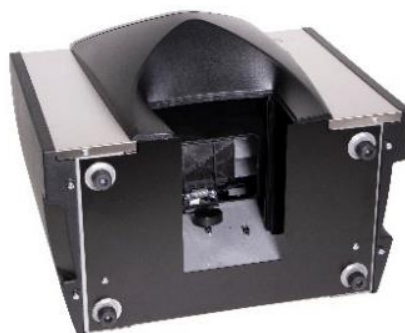
Qty	Description
1	Model GAC™ 2700-LF Moisture Tester
1	Quick Start Guide
1	AC Power Cord
1	Allen Wrench
1	Cleaning Brush
1	Grain Drawer

Setting up the Instrument

Setting up the GAC™ 2700 moisture tester requires the following steps:

1. Open the carton and remove the Allen wrench from the upper foam insert.
2. Remove the instrument from the plastic bag. Save the bag, the packaging material, and the carton to use for future transport of the instrument.
3. Ensure the installation location is level using the bubble level at the top of the instrument; adjust the feet if necessary. Unit must be kept level, making sure that there is sufficient clearance between the unit and the countertop so that the grain drawer is cleanly inserted into the instrument.
4. Remove the grain drawer and place the unit gently on backside to locate the shipping brackets on the left and right side walls.

IMPORTANT: Be careful when placing the unit on its backside to avoid damage to the security switch.



5. Loosen and then remove the hex bolt from the bracket on the left side wall.



6. Press down on the bracket to release.



7. Slide the bracket toward the bottom of the instrument.



8. Insert the hex bolt into the operating location hold and tighten using the Allen wrench.



9. Perform the same procedure to the bracket on the right side wall.
10. Once both brackets are tightened to the operating location, place unit upright.

Reverse the process to re-install the brackets for transportation. This locks the weighing mechanism to prevent damage when moving.


Initial Setup

Once the unit is powered up, the unit will already be logged into the default user profile. This default user can run samples and access most functions of the unit.


The default user will be logged into each time the unit is restarted.

There is also an Admin user profile installed on the unit with a blank password that can access all functions.

To access all functions of the unit:

1. Press  in the upper right-hand part of the screen.
2. Press the **Log Out** button to exit the default profile.

NOTE: *Once logged out, you can only return to the default user by restarting the unit.*

3. Press  again to access the Login page.
4. Select “**Admin**” from the list of user profiles.
5. Press the **Login** button to start using the instrument.

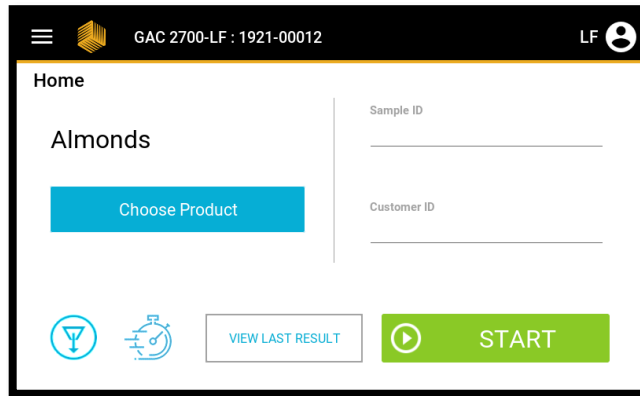
NOTE: *Setup a custom user name and password, go to the Main Menu (upper left) and press “Users/Passwords”. Refer to the Operator’s Manual for additional information.*

Register the instrument at the following website:

<http://www.dickey-john.com/gac2700reg>

Conducting Grain Analyses

The GAC™ 2700 moisture tester is designed to require minimal user interaction to run grain moisture measurements. From the Home screen:



1. Press the **Choose Product** button to select the grain or crop that will be analyzed.
2. Enter **Sample ID** (If desired).
3. Enter **Customer ID** (If desired).
4. Pour the sample into the Hopper.
5. The **START** button will change to Green when there is enough grain in the hopper to properly run a sample.
6. Press the **START** button.

NAVIGATION

The user interacts with the instrument using the LCD touch screen display. Screen interaction by finger touch.

Refer to [Maintenance](#) section for cleaning display.

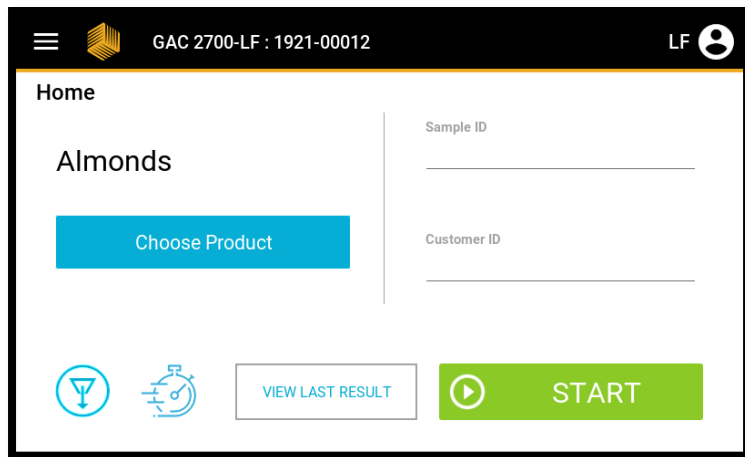
NOTICE

DO NOT use any sharp objects on the display. Damage to screen can result.


The following methods are used to navigate and interact with the unit:






1. Text input boxes
2. Buttons
3. Keyboard

Figure 3 LCD Touch Screen Display



The default view for the GAC™ 2700 moisture tester is the Home screen as shown above in Figure 3.

Operation	Description
	Press this button to select the grain desired for moisture measurement. A pop-up window will appear showing all calibrations installed on the instrument. Press Grain Name and the product calibration will automatically transfer to the home screen for analysis.

Operation	Description
<p>SampleID</p> <hr/>	<p>Press the line to bring up a keyboard if it is desired to track the identification of the sample. Type using the keyboard and press .</p>
<p>CustomerID</p> <hr/>	<p>Press the line to bring up a keyboard if it is desired to track the identification of the customer. Type using the keyboard and press .</p>
<div style="text-align: center;">  <p>Dump Button</p> </div>	<p>Press to transfer the sample from the hopper to the grain drawer. This is helpful if the user decides not to measure the sample of grain.</p>
<div style="text-align: center;">  <p>Rapid Analysis Mode</p> </div>	<p>Operational mode where the user has very limited physical contact with the instrument. This is helpful to increase the speed and throughput of the instrument.</p>
<div style="border: 1px solid gray; padding: 5px; text-align: center; width: fit-content; margin: auto;"> <p>VIEW LAST RESULT</p> </div>	<p>Press this button to review the results from the last sample that was run through the instrument.</p>
<div style="background-color: #76b82a; color: white; padding: 10px; text-align: center; width: fit-content; margin: auto;">  <p>START</p> </div>	<p>Press this button to initiate the measurement process. This button will turn Green when the instrument is ready to take a measurement. If the button is Yellow, text will be displayed to indicate action necessary to conduct a grain measurement.</p>

Using External Devices





The following external devices can be used to enter data and navigate through the screens by connecting to the USB ports (2 front / 2 back):

- Keyboard
- Mouse
- Barcode Scanner




On-Screen Keyboard

















Select the line to bring up keyboard and to enter content.

Icon	Description
	Upper Case/Lower Case button is available to switch between upper/lower case letters.
	Delete button is used to delete letter or space.
	Enter button is used to return to the screen and close out of the keyboard option.
	Spacebar button is used to add spaces between letters/words.



Touch Screen Button Functions

Icon	Description
	Home button is available on most screens and, when pressed, returns to the Main screen.
	Drop-down Menu - press this button to select the desired menu option.
	Date - press to change the date.



Icon	Description
	Time - press to change the time.
	Print button allows printing test results to a local printer. Refer to the Setup section for print requirements.
	Left button returns to the previous option within the screen.
	Right button advances to the next option within the screen.
	Abort button dumps grain from hopper, empties the cell, and aborts test.
	Press to navigate to Rapid Analysis Mode. Rapid Analysis Mode is described in more detail later in the manual.
	Drawer Full Button - The button is programmed to turn Blue when the drawer is in the condition required for measurement to occur. The button will be gray when it needs to be emptied. The purpose of the button is to ensure that grain does not overflow the drawer into the instrument and onto the workspace.
	Moisture
	Test Weight
	Temperature
	USB button is used when installing or exporting calibrations or result data to a USB memory device.
	User button appears on the Main Menu screen only if a User ID has been enabled in System Setup.
	Details - press to view additional results or calibration data.
	Filter - press to filter between data.

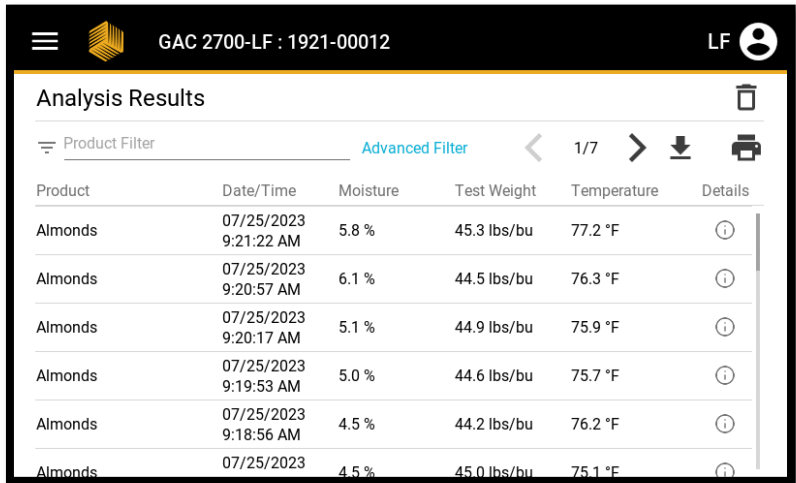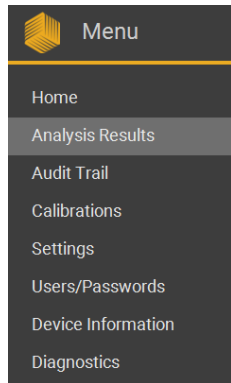


ANALYSIS RESULTS

NAVIGATION FROM  SCREEN:





The GAC™ 2700 moisture tester is equipped with memory to store approximately 5,000 moisture measurement results consisting of all parameters of the measurement. Items such as the grain name, moisture and test weight results, the temperature of the grain at time of measurement, user ID, sample, ID, etc. are all available on this screen.

Operation	Description
Default View	Results are listed in sequential order.
Sorting	Results can be sorted by pressing on any of the column headers. Switch between Increasing and Decreasing by clicking on the Column Header.
Details	Press  to view additional data (User ID, Sample ID, etc.)
Filter	Press the word “Filter” to search for a specific product calibration, etc. After the click, the keyboard is displayed. Type in the desired words and select  to execute the Filter action.
Advanced Filter	Press to filter the results by a certain amount of days (24 hour increments), a specific number of results, or even by name of the user.

Operation	Description
Download	Press  to download results to USB memory device. <i>NOTE: Results will be downloaded in the format as specified in the Settings Page.</i>
Print	Press  to send results to installed printer, third party scale or financial management software system.
Delete Records	Press  to delete results. Enter the quantity of result records to delete in the dialog box that appears on the screen. Results will be deleted starting with the oldest in the database.



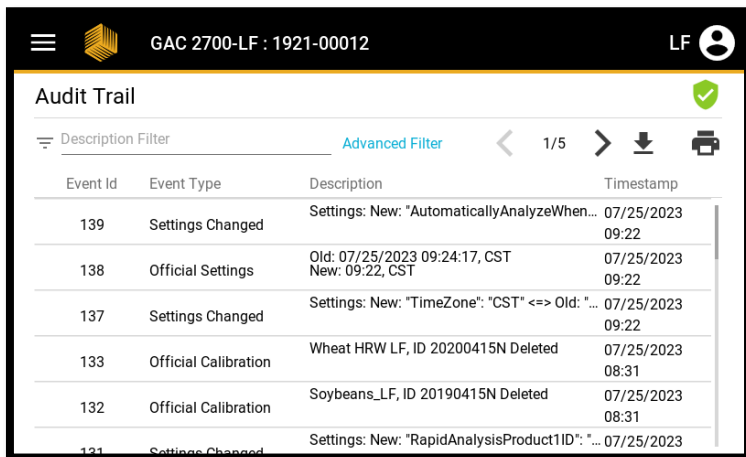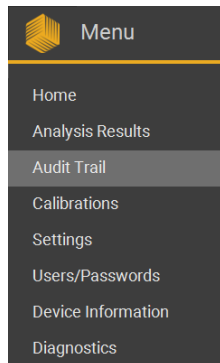AUDIT TRAIL

NAVIGATION FROM  SCREEN:





The GAC™ 2700 moisture tester records all metrological events to an Audit Trail database in order to comply with regulatory requirements for commercial grain trade around the world. The list of events saved to this database include calibration additions, software updates, calibration modifications, service events, error messaging, and changes made to instrument settings. This database is designed to be easily viewed by field inspectors but cannot be erased by users.

Operation	Description
Default View	Events are listed in sequential order as of the time of occurrence.
Sorting	Events can be sorted by clicking the column headers. Switch between Increasing and Decreasing by clicking on the Column Header.
Actions	Press on the individual record to display additional information for each Event logged by the instrument.
Filter	Press the word "Filter" to search for a specific event. After the click, the keyboard is displayed. Type in the desired words and click Enter to execute the Filter action.

Operation	Description
Advanced Filter	<p>Press to filter the results by the type of Event: NTEP event, calibration changes, error messages, etc.</p> <p>Last Number of Days – Toggle to filter by a specific length of time.</p> <p>Max Number of Results – Toggle to filter by to a certain amount of results. Note: Best results are achieved when the Last Number of Days is toggled jointly with this filter.</p>
Download	Press  to download Events to USB memory device.
Print	Press  to send events to installed printer or third-party scale management or financial accounting software system.

CALIBRATIONS

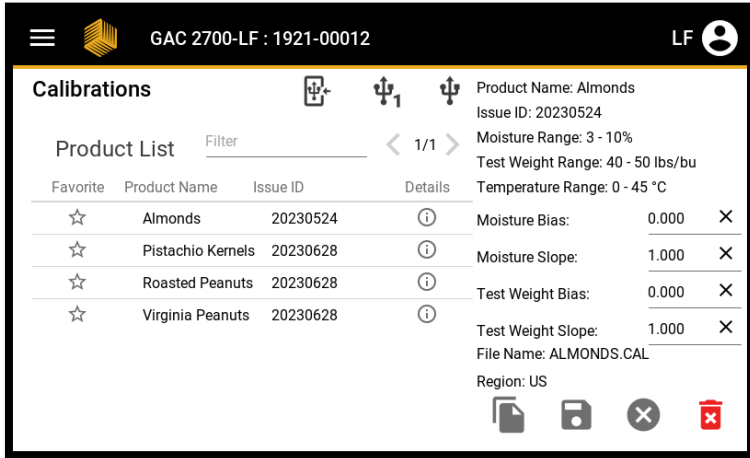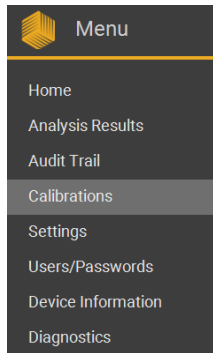NAVIGATION FROM  SCREEN:











The GAC™ 2700 moisture tester is shipped with a default set of product calibrations relevant to the instrument’s intended use and location (as applicable).




NOTE: Specific calibrations are considered “certified”. These calibrations can only be created or modified by DICKEY-john® personnel. They cannot be edited by users, distributors, or Authorized Service Centers.

Users are able to use this menu to view detailed information of the currently installed grain calibrations, add new calibrations, modify existing calibrations, or to delete calibrations.

Please refer to the DICKEY-john® calibration website for a complete list of calibrations available for the GAC™ 2700-LF moisture tester.



Operation	Description
Calibration List	List of calibrations installed on the instrument. Scroll through the list to find the desired calibration.
Calibration Details	Press either the calibration name or  to view specific details regarding the calibration. NOTE: These details cannot be modified for certified calibrations.

Operation	Description
Delete	<p>Once a calibration has been selected to view the details, the  button is displayed on the screen. Press this button to permanently delete a calibration from the instrument.</p> <p>NOTE: <i>The user is required to press the delete button twice as a safeguard to prevent unintended calibration deletion.</i></p>
Modify Existing Calibrations	<p>The instrument will permit the user to modify existing calibrations as long as the calibration is not certified.</p> <ol style="list-style-type: none"> 1. Press the desired calibration name so the details screen is displayed. If the calibration is not certified, then the Bias & Slope values for the moisture and test weight parameters will be in black font. 2. Press on the line to bring up a keyboard to modify the bias or the slope. 3. Pressing  will delete the modifications from the GAC™ 2700 moisture tester. 4. Press  to save the value. 5. Press  to save the calibration. <p>NOTE: <i>If the user desires to modify a certified calibration, see Copy Icon below.</i></p>
 Copy Icon	<p>The instrument will permit the user to create a new calibration based upon a previously created calibration.</p> <ol style="list-style-type: none"> 1. The user should first select the desired calibration to copy. 2. Press . 3. Enter a name for the new calibration. <p>NOTE: <i>The instrument will always default to the name of the copied calibration with “NEW” at the end.</i></p> <ol style="list-style-type: none"> 4. Enter an Issue ID for the new calibration. <p>NOTE: <i>The instrument will default to the current date.</i></p> <ol style="list-style-type: none"> 5. Press  to save the calibration.
Sorting by Column Header	<p>Press the column header (Favorite, Product Name, etc.) to sort the calibration list by the identifier. Press the header twice to switch between ascending and descending values.</p>

Operation	Description
Filter	Press the line, type in the calibration name on the on-screen keyboard, press the Enter key, and the instrument will display calibrations installed that contain the name entered.
USB Symbols	<p>Press  to access calibration bundles saved on a USB memory stick inserted into one of the USB-A ports of the instrument. Follow the on-screen prompts to download the calibration bundle.</p> <p>Press  to upload a single calibration.</p> <p>Press  to export calibrations to a USB memory stick.</p>

SETTINGS

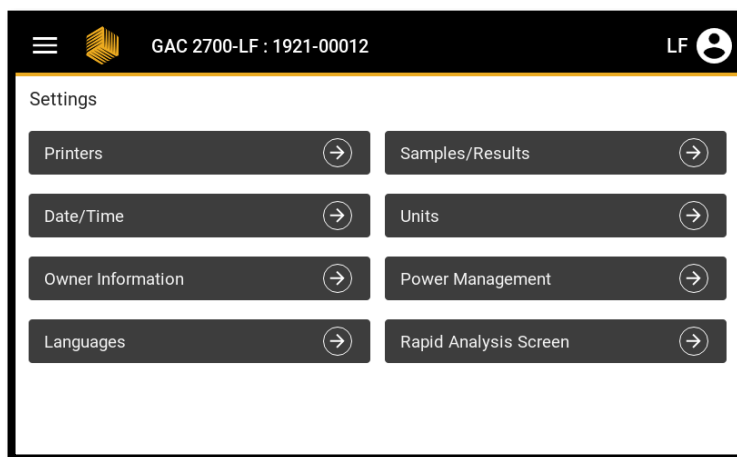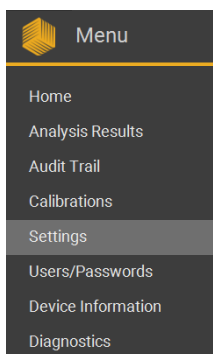
NAVIGATION FROM  SCREEN:



The GAC™ 2700 moisture tester can be configured to meet the needs of any application globally where grains, nuts and other products are analyzed to determine moisture content. Because operators are able to configure the instrument specifically to their operational needs, they are able to realize time, labor, and other resource savings.


Operation	Settings to Change
Languages	Select the language of operation for the instrument.
Printers	Configure the data stream output of the instrument to a printer or third-party software program.
Date/Time	Modify the instrument date / time. The date and time are recorded during each grain measurement.
Owner Information	Enter name, address, and other relevant information on the location where the instrument is used.
Languages	Select the language of operation for the instrument.
Samples / Results	Configure the functionality of the instrument prior to and post measurement.
Units	Configure the instrument for imperial or metric units.
Power Management	Adjust the screen brightness for readability based upon the specific lighting of the instrument's location.
Rapid Analysis Screen	Add/Subtract the product calibrations that will be shown on the Rapid Analysis Mode screen.

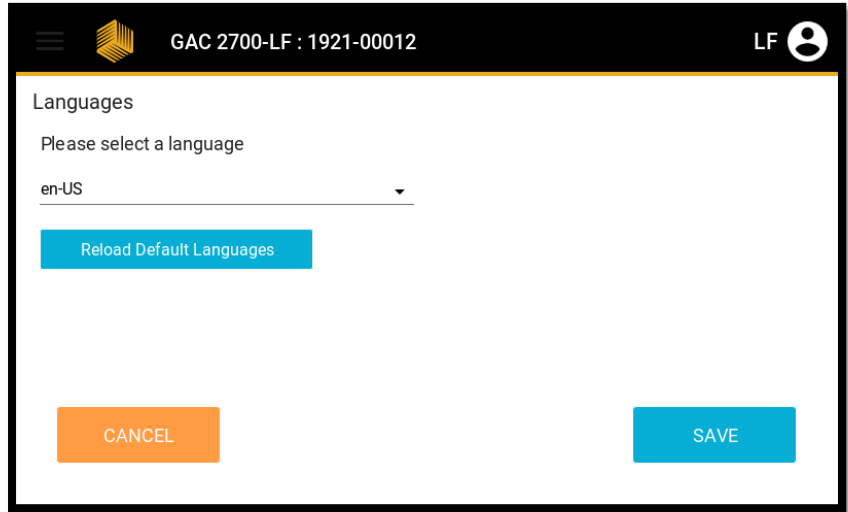Languages



Operation	Process to Change the Setting
Language List	Select the desired language of operation for the GAC™ 2700 moisture tester. This will change onscreen language to the language selected. <i>NOTE: There are a few screens that only appear in English, such as the Diagnostics page.</i>
Cancel	Select to exit the menu with no changes.
Save	Select to save the changes.

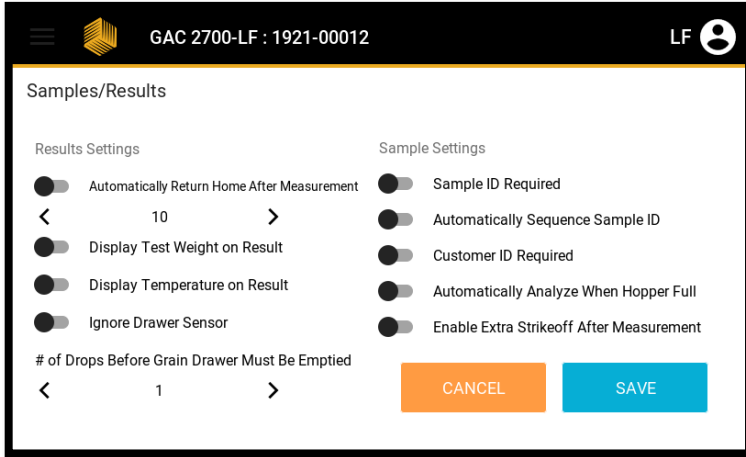Samples/Results




NOTE: Some of these settings may not be able to be changed by the operator due to specific regulatory requirements.

The GAC™ 2700 moisture tester is designed to provide advanced customization options based upon operator preferences, application requirements, or regulatory specifications. The operator is permitted to change both the operation pre-measurement (sample settings) and post measurement (results settings). The settings on this screen are adjusted using a Toggle Bar: Press to toggle between Off () and On (). Settings in black font can be modified while setting in gray font cannot be modified.

Operation	Process to Change the Setting
Automatically Return Home After Measurement	Toggle to force the instrument to return back to the Home screen between 1 to 20 seconds after each measurement.
Display Test Weight on Result	Toggle to the On position so that the instrument will display the Test Weight value of each measurement on the Results screen.
Display Temperature on Result	Toggle to the On position so that the instrument will display the temperature value of each measurement on the Results screen.
Ignore Drawer Sensor	Toggle to permit the grain measurement process without the drawer inserted into the instrument. This is useful for operations that utilize a bottomless drawer. <i>Note: Selecting this option without a grain collection process in place will result in grain spillage on the counter.</i>

Operation	Process to Change the Setting
# of Drops Before Grain Drawer Must Be Emptied	Determine the quantity of samples that can be run before the instrument will require that the grain drawer be emptied to prevent grain mess on the counter. The first option is the infinity symbol, which should be selected if the instrument will be used in Bottomless Drawer Mode. The other options are 1 drop or 3 drops.
Sample ID Required	Toggle to require the operator to enter an identification (ID) for each sample prior to analysis start.
Automatically Sequence Sample ID	Toggle to have the instrument automatically increase the increments of the Sample ID. The instrument is capable of detecting numbers in the sample ID and then will automatically increase the number if this feature is enabled.
Customer ID Required	Toggle to require the operator to enter an identification (ID) for each customer prior to analysis start.
Automatically Analyze When Hopper Full	Toggle to enable the instrument to operate an analysis without depressing of the “Start” button once it senses that the hopper is full.
Enable Extra Strike-off After Measurement	Toggle to enable the instrument to perform an additional strike-off when dumping the measurement cell to ensure that there is no grain left on top of the measurement cell.
Cancel	Select to exit the menu with no changes
Save	Select to save the changes

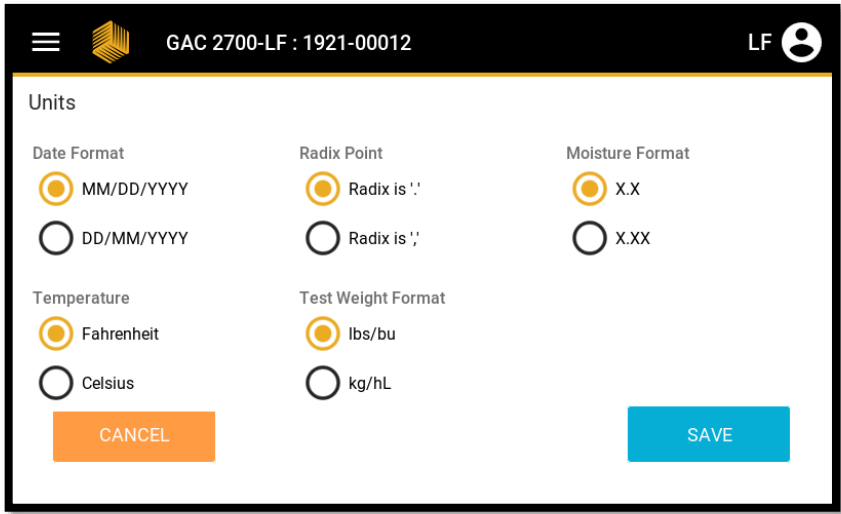
Units



The GAC™ 2700 moisture tester is capable of delivering results in both imperial and metric units in order to meet the needs of the global moisture measurement market. Settings in black font can be modified while setting in gray font cannot be modified.

Operation	Process to Change the Setting
Date Format	Click on the desired format for date presentation.
Radix Point	Click on the desired format for number separation (XXX,XXX or XXX.XXX).
Moisture Format	Click on whether the moisture result will be displayed and saved with one decimal point or two.
Temperature Format	Click on whether the measurement results are displayed in Fahrenheit or Celsius.
Test Weight Format	Click on whether the test weight results are displayed in pounds per bushel (lbs/bu) or kilogram per hectoliter (kg/hl).
Cancel	Select to exit the menu with no changes.
Save	Select to save the changes.

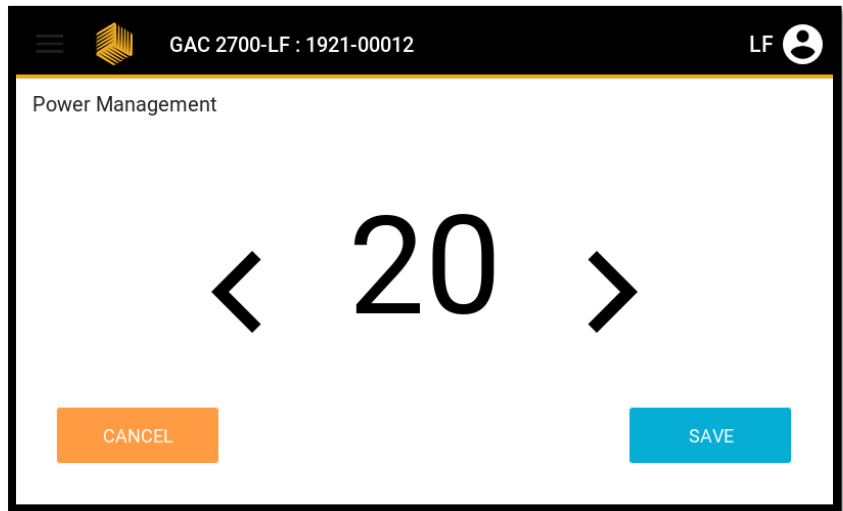
Power Management



The GAC™ 2700 moisture tester is equipped with the ability to modify the brightness of the touchscreen in order to provide the clearest visibility to the operator.

Operation	Process to Change the Setting
Left Arrow	< to decrease the screen brightness.
Right Arrow	> to increase the screen brightness.
Cancel	Select to exit the menu with no changes.
Save	Select to save the changes.

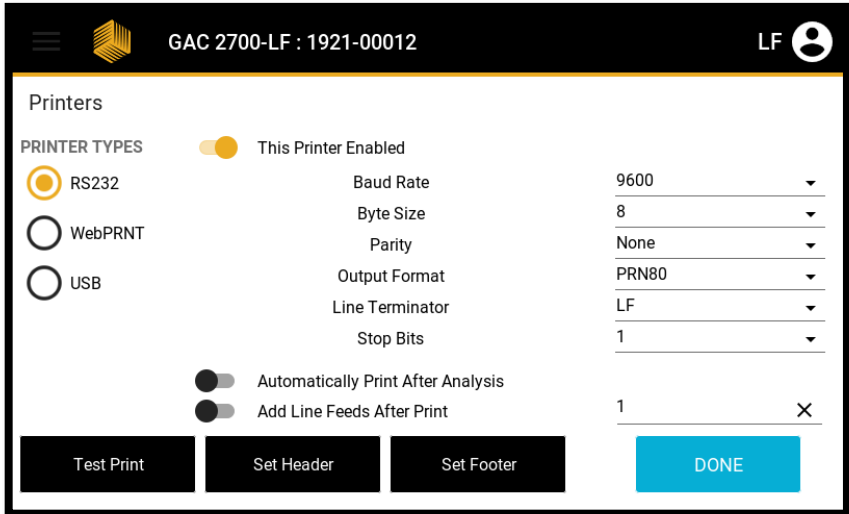Printers



NOTES:

1. It may be necessary to contact the scale system / accounting software vendor to obtain the specific data streaming requirements for this setting.
2. Call **DICKEY-john Technical Support** at 1-800-637-3302 with any questions regarding printers / data streaming.

The GAC™ 2700 moisture tester is designed to provide an onscreen moisture measurement result and relevant data to external printers. It can also be configured for third party scale or accounting software programs. Because each application is different, the instrument will need to be configured to the specific output device as required by the end user.

The instrument incorporates a modern operating system for firmware and software. Customers with older printers should check with their dealer / distributor to determine compatibility with the GAC™ 2700 moisture tester.

The instrument has been designed to permit data export to two devices at the same time. This is useful for operations that stream the data to a truck scale software program via the RS232 port and to a printer using the Ethernet port. To enable dual export, simply toggle the “This Printer Enabled” button to the On position for both printers.



Currently, the GAC™ 2700 moisture tester supports two types of printer/data streaming:


1. A Star 742WebPRNT printer as manufactured by Star Micronics. This printer communicates to the GAC 2700 moisture tester using the Ethernet port located on the back panel of the instrument.
2. RS232 Enabled Printers / Data Streaming. The RS232 port is the standard among the grain industry for printer communication and data streaming to third party software programs. This capability is accessed using the RS232 port on the back panel of the instrument.
3. USB Printing using a Star SP712 USB Printer. See the section **Setting Up A USB Printer** for detailed instructions on how to properly connect the instrument to a USB printer.


Operation (General)	Process to Change the Setting
Printer Type	Select whether the instrument will communicate results data to the Star 742WebPRNT printer or an RS232 compatible device.
Test Print	Press this button to test print the data to the output stream.
Set Header	Press this button to enter text that will print on the top of each measurement result.
Set Footer	Press this button to enter text that will print on the bottom of each measurement result.
Cancel	Select to exit the menu with no changes.
Save	Select to save the changes.

NOTE: Star has recently released the Star 742CloudPRNT, a replacement of the WebPRNT. Either of these printers will work when this option is selected.


Operation (WebPRNT)	Process to Change the Setting
This Printer Enabled	Toggle to enable this printer.
WebPRNT IP Address	<ol style="list-style-type: none"> 1. Manually enter the IP address of the printer that is connected to the network. 2. Select the line and a keyboard will be displayed. 3. Manually enter the IP address using the keyboard. 4. Press <input checked="" type="checkbox"/> to save the value.
Output Format	It is possible to choose between different widths for the print out of measurement results. Choose the desired option from the drop-down box.
Line Terminator	Choose the desired option for the end of the line of the result being sent to the printer. This directs the printer at the point to move to a new line.
Automatically Print After Analysis	Toggle to automatically send the result to the printer after each analysis rather than pressing the Printer button on the measurement results screen.
Add Line Feeds After Print	<p>Toggle to direct the printer to add empty lines after each measurement result.</p> <p>Once activated, it is necessary to manually enter a number of blank lines:</p> <ol style="list-style-type: none"> 1. Select the line so that the keyboard is displayed. 2. Select the appropriate number. 3. Press <input checked="" type="checkbox"/> to save the value.
Cancel	Select to exit the menu with no changes.
Save	Select to save the changes.

Operation (USB)	Process to Change the Setting
This Printer Enabled	Toggle to enable this printer / data streaming device.
Output Format	It is possible to choose between different widths for the print out of measurement results. Choose the desired option from the drop-down box.
Line Terminator	Choose the desired option for the end of the line of the result being sent to the printer. This directs the printer at the point to move to a new line.
Automatically Print After Analysis	Toggle to automatically send the result to the printer after each analysis rather than pressing  on the measurement results screen.
Add Line Feeds After Print	<p>Toggle to direct the printer to add empty lines after each measurement result.</p> <p>Once activated, it is necessary to manually enter a number of blank lines:</p> <ol style="list-style-type: none"> 1. Select the line so that the keyboard is displayed. 2. Select the appropriate number. 3. Press  to save the value.

Operation (RS232)	Process to Change the Setting
This Printer Enabled	Toggle to enable this printer / data streaming device.
Baud Rate	Select the desired baud rate from the Drop-down menu.
Byte Size	Select the desired byte size from the Drop-down menu.
Parity	Select the desired parity from the Drop-down menu.
Output Format	It is possible to choose between different widths for the print out of measurement results. Choose the desired option from the drop-down box.
Line Terminator	Choose the desired option for the end of the line of the result being sent to the printer. This directs the printer at the point to move to a new line.
Stop Bits	Select the desired stop bits from the Drop-down menu.
Automatically Print After Analysis	Toggle to automatically send the result to the printer after each analysis rather than pressing  on the measurement results screen.

Operation (RS232)	Process to Change the Setting
Add Line Feeds After Print	<p>Toggle to direct the printer to add empty lines after each measurement result.</p> <p>Once activated, it is necessary to manually enter a number of blank lines:</p> <ol style="list-style-type: none"> 1. Select the line so that the keyboard is displayed. 2. Select the appropriate number. 3. Press  to save the value.
Cancel	Select to exit the menu with no changes.
Save	Select to save the changes.

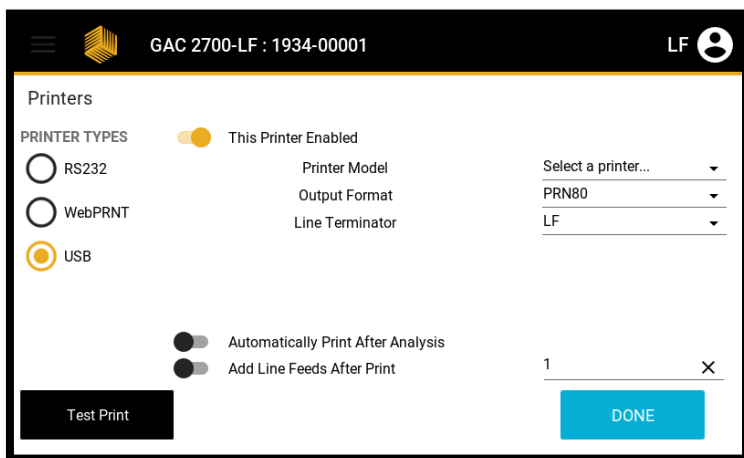
Setting Up A USB Printer




NOTE: This procedure is specifically referencing a Star SP712 USB Printer. This may not work for other USB printers.

1. Ensure that both the instrument and the printer are powered OFF.
2. Connect the printer to the instrument using a USB-A to USB-B cable.
3. Turn on the printer then once it is powered up, turn on the instrument.

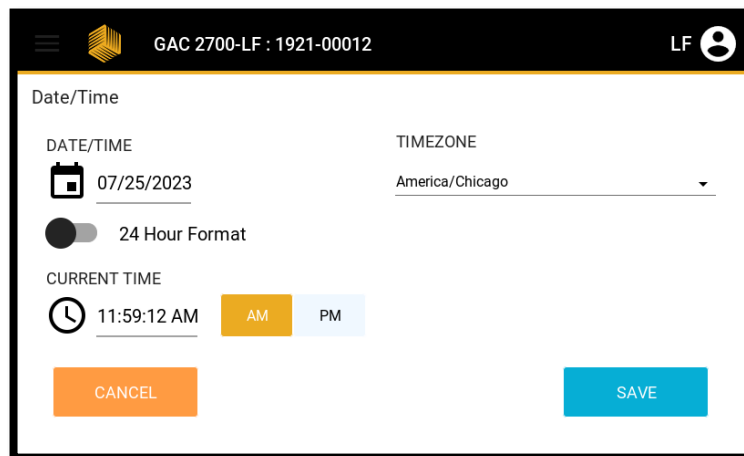
NOTE: Make sure that you are logged into a user that has permission to change printer settings.

4. Press the  button in the upper left corner to open the navigation menu.
5. Press **Settings** in the navigation menu.
6. Press the **Printers** button.



7. In the Printers menu, select **USB** on the left-hand side of the screen.
8. Toggle the “This Printer Enabled” button to the On () position.
9. From the Printer Model pull-down menu, select the name of the USB printer connected (i.e. Star SP712_USB (STR-001)).
10. Press **DONE** in the bottom righthand corner of the screen.
11. In the Configure New Printer pop-up, press **CONFIRM**. The printer should then print a Printer Settings printout and a Character Set printout.

NOTE: After initial setup of a USB printer with the instrument, a power cycle of the unit is recommended to ensure proper communications are established with the printer.

Date/Time






Throughout the course of the instrument life, it may be necessary to adjust the date or the time on the unit so that the time of measurement is accurately recorded. This screen allows the authorized user to change the date and/or time.



Operation	Process to Change the Setting
Date	<ol style="list-style-type: none"> 1. Press . A calendar is displayed. 2. Select the correct date. 3. Press Close.
Time	<ol style="list-style-type: none"> 1. Press . A clock is displayed 2. Select the correct time 3. Select OK.
Cancel	Select to exit the menu with no changes
Save	Select to Save the changes

Owner Information

The GAC™ 2700 moisture tester permits the user to apply owner information into the instrument memory in order to aid with asset tracking.

Operation	Process to Change the Setting
Owner Name	<ol style="list-style-type: none"> 1. Press on a line and the on-screen keyboard is displayed. 2. Type the necessary information. 3. Press  at the bottom right of the keyboard to exit the keyboard.
Owner Address	<ol style="list-style-type: none"> 1. Press on a line and the on-screen keyboard is displayed. 2. Type the necessary information. 3. Press  at the bottom right of the keyboard to exit the keyboard.
Owner Phone Number	<ol style="list-style-type: none"> 1. Press on a line and the on-screen keyboard is displayed. 2. Type the necessary information. 3. Press  at the bottom right of the keyboard to exit the keyboard.
Cancel	Select to exit the menu with no changes.
Save	Select to save the changes.

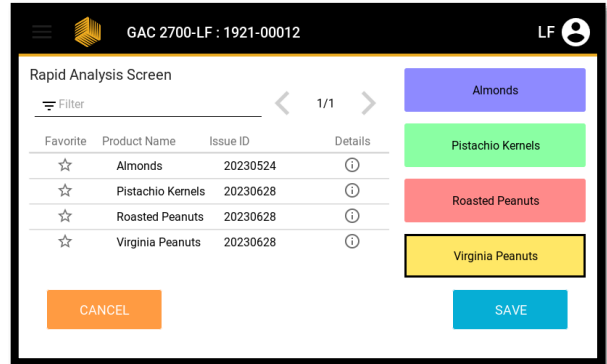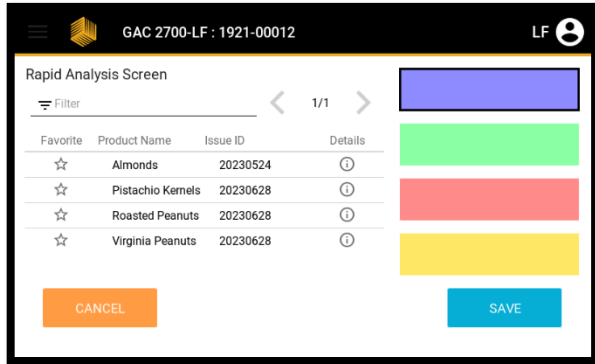
Rapid Analysis Mode




NOTE: Customized Sample ID and Customer ID are not available in Rapid Analysis Mode.

The GAC™ 2700 moisture tester features an innovative operational process reducing the time required to conduct a measurement of grain moisture. It also eliminates the need for operators to physically touch the instrument.


This process is completely customizable. Operators are able to select the specific grain calibrations displayed on the screen and also the position of those calibrations.

Operation	Process to Change the Setting
Calibration List	The instrument will display a list of the calibrations installed on the instrument. The user may need to scroll down the calibration list to find the desired calibration.
Filter	<ol style="list-style-type: none"> 1. Press on the line for the keyboard to display. 2. Type in the name of the desired grain calibration. 3. Press : The instrument will show calibrations that contain that name.
Purple Button <i>To replace a grain calibration once it has been tagged to a button, simply press the button once. The grain calibration disappears and a new one can be added.</i>	<ol style="list-style-type: none"> 1. Press to determine which grain will show at the top of the list of calibrations. 2. Select the desired grain calibration. <p>The instrument automatically populates the button with the grain name.</p>
Green Button <i>To replace a grain calibration once it has been tagged to a button, simply press the button once. The grain calibration disappears and a new one can be added.</i>	<ol style="list-style-type: none"> 1. Press to determine which grain will be displayed as #2. 2. Select the desired grain calibration. <p>The instrument automatically populates the button with the grain name.</p>

Operation	Process to Change the Setting
<p>Red Button <i>To replace a grain calibration once it has been tagged to a button, simply press the button once. The grain calibration disappears and a new one can be added.</i></p>	<p>1. Press to determine which grain will be displayed as #3. 2. Select the desired grain calibration. The instrument automatically populates the button with the grain name.</p>
<p>Yellow Button <i>To replace a grain calibration once it has been tagged to a button, simply press the button once. The grain calibration disappears and a new one can be added.</i></p>	<p>1. Press to determine which grain will be displayed as #4. 2. Select the desired grain calibration. The instrument automatically populates the button with the grain name.</p>
<p>Details</p>	<p>Press  view the calibration Issue ID, Moisture Range, Temperature Range, etc.</p>
<p>Cancel</p>	<p>Select to exit the menu with no changes.</p>
<p>Save</p>	<p>Select to save the changes.</p>

USERS/PASSWORDS

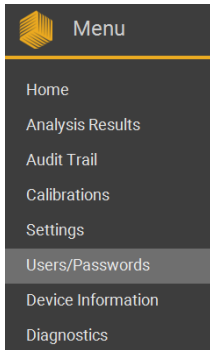NAVIGATION FROM  SCREEN:



The GAC™ 2700 moisture tester is designed with the option to have a high level of instrument security, an advanced user/password system, and other preventative measures to keep your operation secure.

The unit is setup with a Default user Admin with no password. To make the instrument more secure, a password can be setup on the Users/Passwords screen for the Admin who can then be responsible for determining the amount of security enabled on the unit. The Admin can setup additional users and customize access levels for each of them as desired.


With the exception of Password maintenance, edit functionality for the User/Passwords menu is only available to the Admin user profile.

The instrument is equipped with a set of roles with default permissions that allows users to conduct actions on the instrument. These roles are then assigned to users. Users can have multiple roles.

Operation	Description
Users	Press this button to access the User menu to maintain the User list (add, delete), assign roles to users, force user passwords to expire, and create the initial password for users. This menu is only accessible to the Admin.
Roles	Press this button to access the Roles menu to view the various functions that users can alter in the instrument settings. This menu is only accessible to the Admin.

Operation	Description
Password Policy	Press this button to configure password strength for the various users. This menu is only accessible to the Admin.
Login Settings	Press this button to configure the auto-login feature.

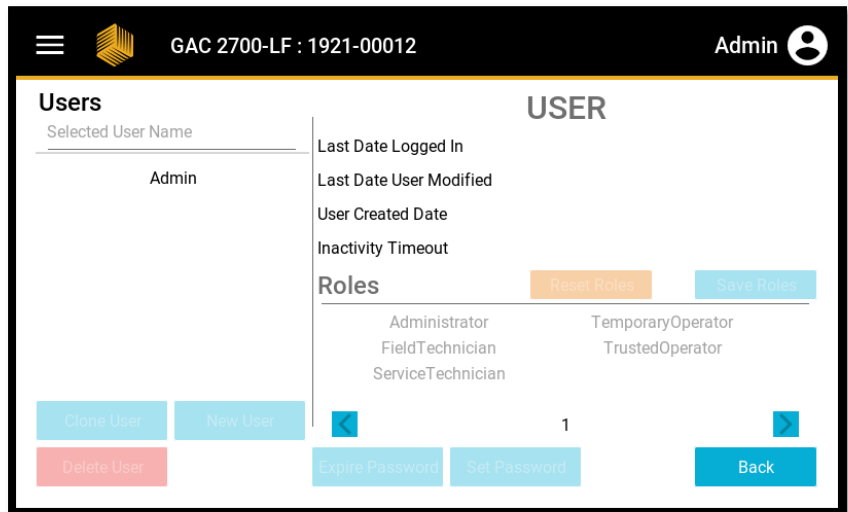Users




The GAC™ 2700 moisture tester can be configured for multiple levels of user interaction with the settings that would affect metrology of the instrument. This menu provides the Admin with the ability to configure what pre-defined set of permissions a user would have in the form of roles.

The Admin will use this menu to assign roles to a specific “User”, which dictates the level of access to the GAC™ 2700 moisture tester for operators. The Admin will also use this menu to add or delete users that have access to operate the instrument.

Operation	Description
List of Users	This is a list of all the Users that are able to use the instrument. Pressing on a specific name populates the remainder of the screen with the detail and history of that User.
Cancel	Press to erase any changes and revert to the previous page.
Save	Press to save changes.
Clone User	Press this button to copy the roles of a specific user to apply to a new User. A popup box will appear on the screen. Type the name of the new User.

Operation	Description
New User	Press this button to create a brand-new User. A popup box will appear on the screen. Type in the name of the new User.
Delete User	To remove a User's access to the instrument, the Admin must first select the name from the list of Users. Once the other fields on the screen are populated with the desired User, Press this button to remove the User. A popup box will appear on the screen to confirm the deletion process. The Admin will need to press the "Delete" button twice to remove the User.
User Activity	List compiled by the instrument that details recent User login activity.
Roles	Admins are able to assign a Role or Roles to each User in this screen. The Role dictates the specific behavior and functionality that the User can have when using the instrument. The specific Roles are defined in the next section of the manual.
Reset Roles	Press this button to Reset the Roles of the User to the level that was setup when the User was created.
Save Roles	Press this button to save any changes made to the Roles that are assigned to a specific User.
Expire Password	Press this button to require the selected User to create a new password.
Set Password	Press this button if the Admin desires to change the Password for a specific User.
Back	Press this button to revert back to the User/Passwords main menu.

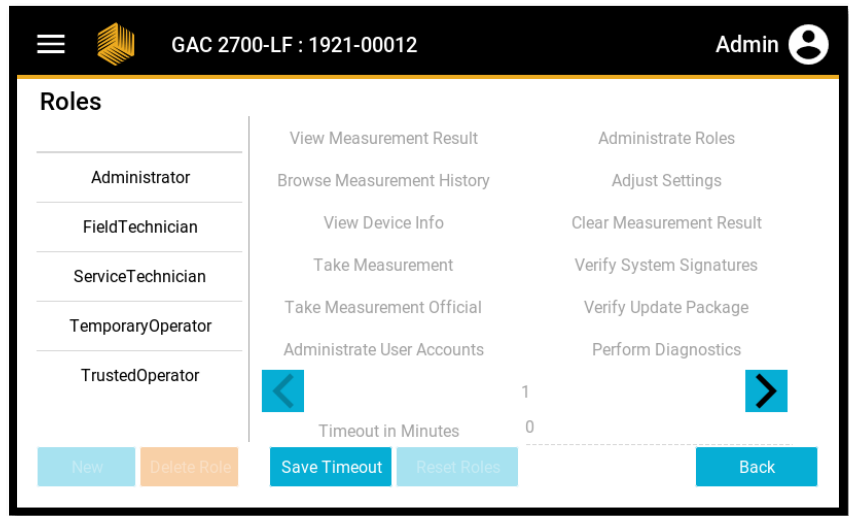Roles



The GAC™ 2700 moisture tester can create preset lists of permissions which are called 'Roles'. These sets of permissions will allow the Admin to define whether a specific operator is able to only conduct a moisture measurement, adjust settings, download new software, all of these, none of these, or conduct other interactions with the instrument.

Roles should be tied to the permissions that the Admin desires for specific users in the operational process.

Operation	Description
List of User Types	<p>By Default, there are five types of Roles that are pre-configured on the instrument:</p> <ol style="list-style-type: none"> 1. Administrator - Typically a manager of the facility, this Role is responsible to maintain the list of qualified Users. This Role can also perform day-to-day activities. 2. Field Technician - This Role can perform all the necessary day-to-day activities including problem solving in the Diagnostics menu. This Role cannot make changes to the User list. 3. Service Technician - Typically this Role is assigned to a dealer/distributor that would perform service if necessary in the future. This Role has Read/Write access to the User list. 4. Temporary Operator - Typically a seasonal worker, this Role can only perform operational activity such as conducting measurements, viewing and printing results or the audit trail, etc.

Operation	Description
List of User Types <i>(cont.)</i>	5. Trusted Operator - This Role is a day-to-day User that has full operational activity but adds a permission level to make adjustments to instrument settings, including calibration updating.
Timeout In Minutes	Define the number of minutes of inactivity after which the user will be automatically logged out of the instrument. A setting of 0 minutes will disable automatic logout.
List of Roles	This is a list of the behaviors, interactions, and changes that a User Type can make to the instrument. <ul style="list-style-type: none"> • Enabled role: Black font • Disabled role: Gray, faded font
Back	Press this button to revert back to the User/Passwords main menu.

Password Policy Menu

The GAC™ 2700 moisture tester can be configured for multiple options regarding the strictness of passwords.

Operation	Description
Special Characters Required in Password	Toggle to require the User to Include a minimum of one special character (\$, #, @, etc.) in the password.
Numbers Required in Password	Toggle to require the User to include a minimum of one number (1, 184, 20, etc.) in the password.

Operation	Description
Letters Required in Password	Toggle to require the User to include a minimum of one letter (a, t, u, etc.) in the password.
UPPER and lower case Required	Toggle to require the User to include a minimum of one uppercase letter and minimum of one lowercase letter in the password.
Password Length	Modify the minimum and maximum number of characters that a User must include in the password. <i>NOTE: The minimum number of characters cannot exceed 18 characters.</i>
Password Lifespan	Modify the length of time (days) that the User password is operational. After the length of time has expired, the next time the user logs into the instrument, the User will be instructed to select a new password.
Blank Password Allowed	Toggle if the Admin desires to allow the User to not have to use a password to operate the instrument. When this option is selected, it will disable the password requirements as stated above. The Admin is responsible to determine the strictness level for User passwords. <i>NOTE: Due to security considerations, this may not be permitted in certain countries.</i>
Cancel	Press to erase any changes and revert to the previous page.
Save	Press to save changes. These changes will become effective upon the next power cycle.

If the Admin has implemented requirements for passwords, a popup box will be displayed if a newly created password does not comply with the requirements. An example is in the picture below. The dialogue box will instruct the User which requirements are not met and must be modified in the password. Items in black font are required in the password.

Special characters required

Digits required

Letters required

UPPER & lower case Required

Min length: 5 Max length: 18

Enter a new password:

Cancel SAVE

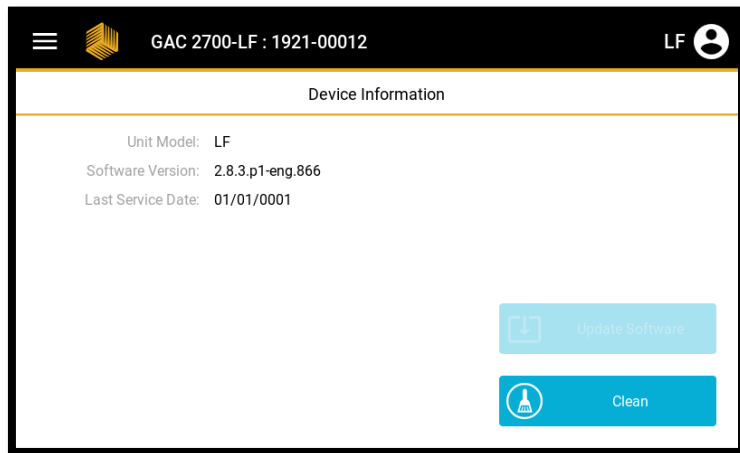
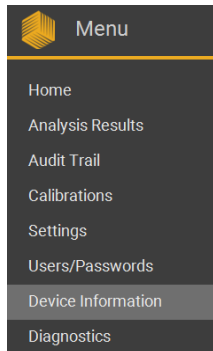
Login Settings Menu





The Auto-Login features of the GAC™ 2700 moisture tester can be enabled or disabled on this screen.

DEVICE INFORMATION

NAVIGATION FROM  SCREEN:




This screen displays the information potentially required during field audits by regulatory agencies. This information is pre-populated either at the factory or by Authorized Service Centers and cannot be changed by end users.

Operation	Description
Model	Specific model number within the GAC™ 2700 moisture tester product family.
Software Versions	Series of digits that indicate the levels of the application software and the firmware software.
Last Service Date	Optional for Authorized Service Centers to enter this information to increase frequency of service intervals.
 Update Software	Press this button to update the instrument's software. The button will be faded and disabled unless a USB stick with a version of software newer than the current installed version is present.
 Clean	Press this button to start the instrument's cleaning mode. <i>Refer to the Cleaning/Maintenance section for more detailed instructions.</i>

Update Instrument Software

PLEASE READ

It is critically important to follow these instructions exactly to prevent disrupting the update process prior to completion which could cause the instrument to become inoperable.

1. Copy the software file provided by DICKEY-john® or an authorized service center into the root directory of a USB drive.
2. Confirm that the current user profile has administrator privileges.
3. Insert the USB drive with the update file into any USB-A port.
4. Press the  button in the upper left corner to open the navigation menu.
5. Press **Device Information** in the navigation menu.
6. Press the **Update Firmware** button.
7. The update process will begin and a progress bar will be displayed on the screen.

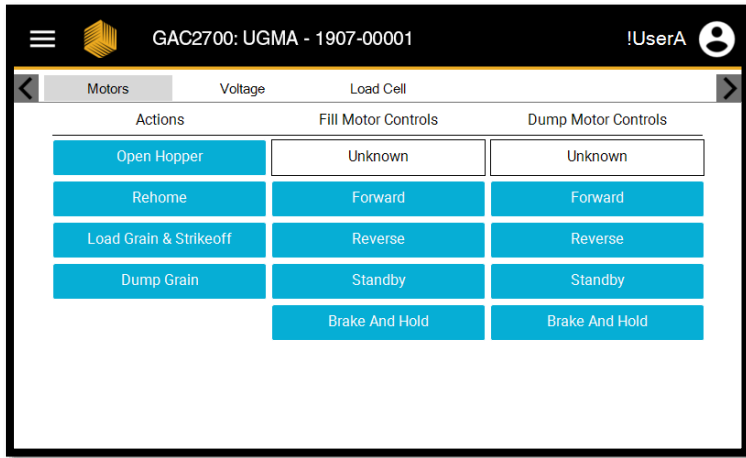
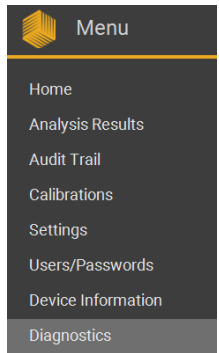
NOTICE

The instrument will automatically reboot multiple times during the update process. **DO NOT** interact with the screen, remove the USB drive or manually remove power until the message **2005: Software Update Successfully Completed** displays. Removing power or disrupting the update process prior to completion could cause the instrument to become inoperable.

8. The updated instrument is now ready for use.

DIAGNOSTICS

NAVIGATION FROM  SCREEN:



The purpose of this menu is to provide the specific data required by technicians to diagnose, troubleshoot, and resolve issues that may occur on the GAC™ 2700 moisture tester. This section is only intended for authorized service personnel and cannot be changed or modified by end users.

CLEANING / MAINTENANCE

NOTE: For customers that require a more extensive cleaning procedure with debris buildup in the cell, contact and schedule your instrument for cleaning with your dealer or Authorized Service Center.

IMPORTANT: It is recommended the unit be regularly inspected and cleaned to ensure continued and consistent results.

For optimum performance, extensive cleaning should be performed weekly or more often, as needed, based on surrounding environmental conditions. Factors such as dust, temperature extremes, grain dust, and external humidity vary from location to location. If there are any questions about the cleanliness or instrument performance, contact your local Authorized Service Center.

NOTE: The following recommendations are provided as a guideline to maintain a robust and quality operating instrument. It should not be interpreted as an exhaustive maintenance program. Dust and debris may periodically accumulate in areas not specified in this manual. The owner is responsible for ensuring overall equipment cleanliness. If any questions arise regarding the maintenance or performance of the instrument, contact your dealer or local Authorized Service Center.

External Cleaning


NOTICE

The LCD display may require periodic cleaning. Use a commercial cleaner for glass lenses to remove dust.

DO NOT apply water, organic solvent or chemicals, such as acid and alkali to the LCD display.

The instrument surface can be cleaned with any cleaner designed for plastic and stainless-steel surfaces. Periodically use a rag to wipe the grain hopper and the (2) upper grain hopper sensors.

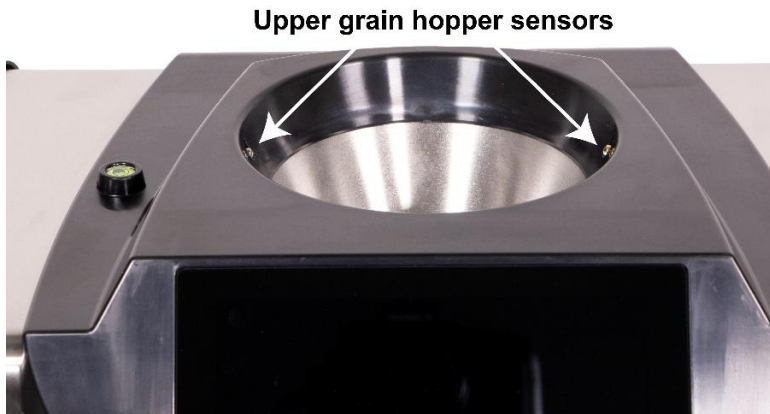Figure 4 Grain Hopper Sensors



Internal Cleaning

Performing continuous tests can result in material accumulation around the critical internal components and adversely affect the measurement.


Two types of cleaning are recommended on an as needed basis:

- Daily clean
- Extensive clean

Daily Clean Method


A daily clean method allows cleaning the cell and door using an automated process. During the cleaning sequence, the hopper door automatically opens.

To start the cleaning process:

1. At the Main Menu screen, press the **Device Information** button.
2. Press .
3. Cleaning mode as active will appear.
4. Remove the grain drawer.
5. Using the supplied brush, manually remove any loose or stuck grain or dust from the measuring cell.
6. Press the **CLOSE** button to return instrument to normal operation.

NOTICE

Hands should be clear from inside the instrument before pressing the CLOSE button.

7. Insert grain drawer.
8. Press  to return to the Home Screen.

Extensive Cleaning Method

NOTE: For customers that require a more extensive cleaning procedure with buildup in the cell, contact and schedule your instrument for cleaning with your dealer or authorized service center.

The daily cleaning method should be performed first before proceeding to the extensive cleaning method.

IMPORTANT: Extensive cleaning should be performed weekly or more often, as needed, based on surrounding environmental conditions. Factors such as dust, temperature extremes, grain dust, and external humidity vary from location to location. If there are any questions about the cleanliness or instrument performance, contact your local authorized service center.

Tool required for internal mechanism cleaning:

- Brush p/n 206410003 (included with instrument)

Extensive cleaning of the instrument involves two steps to ensure optimum instrument performance:

1. Internal mechanism cleaning.
2. Temperature sensor probe cleaning.

To Clean the Instrument:

1. Power down the instrument.

Figure 6 Power Down



2. Unplug power cord.

Figure 7 Unplug Power Cord



3. Remove other accessory cords (USB and printer).

Figure 8 Remove Accessory Cords




4. Remove grain drawer.

Figure 9 Remove Grain Drawer



5. Place the instrument on its back side.

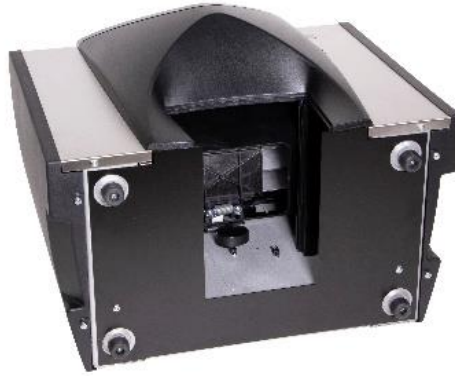Figure 10 Place Instrument on Back Side




6. Manually pull down on trap door.

Figure 11 Pull Down on Trap Door



7. Clean surfaces around measurement cell including hinge, trap door, and edge of cell with the supplied brush.

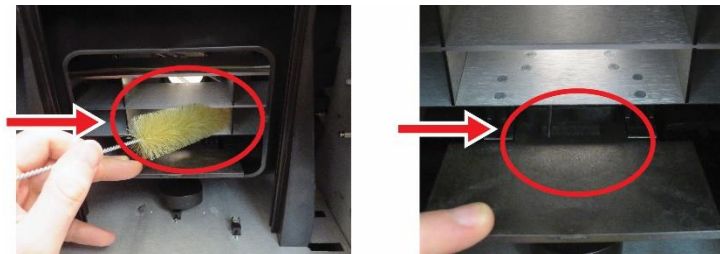Figure 12 Clean Surface Area around Cell, Hinge, Trap Door, Edge of Cell



8. Close the trap door and clean hinge under trap door with brush.

Figure 13 Clean Under Trap Door



9. Proceed to instruction for cleaning the temperature sensor probe.

Cleaning the Temperature Sensor Probe

IMPORTANT: Any particles in front of the sensor's optics can affect measurement performance. Therefore it is crucial to sufficiently clean the sensor. For excessive dust and/or foreign material buildup on or around the temperature sensor, it is recommended the instrument be returned to DICKY-john® Service or authorized service center.

The temperature sensor may require cleaning due to dust buildup and/or foreign material that has collected around the sensor that could potentially cause temperature error readings during analysis. Temperature sensor cleaning should be performed weekly or more often, as needed, based on surrounding environmental conditions. Factors such as dust, temperature extremes, grain dust, and external humidity vary from location to location. It is important the temperature sensor is visually inspected and cleaned each time a regular maintenance check of the instrument is conducted. If there are any questions about the cleanliness or instrument performance, contact your local authorized service center.

Tools required for cleaning the temperature sensor probe:

1. Standard 6" long cotton swab
(i.e. McMaster-Carr p/n 7074T12)
2. 99% Isopropyl Alcohol
3. 10" flat head screw driver

TEMPERATURE SENSOR LOCATION

With the instrument placed upside down and looking inside the instrument, the sensor probe is located in the middle of the instrument toward the top and front attached to a circuit board.

Figure 14 Sensor Probe Location



To Clean the IR Temperature Sensor:


1. Gently place instrument upside down.

Figure 15 Place Instrument Upside Down




2. Carefully place the head of the screw driver (10" length recommended) at the bristles and use a sweeping side-to-side motion through the entire length of the bristles no fewer than three times.

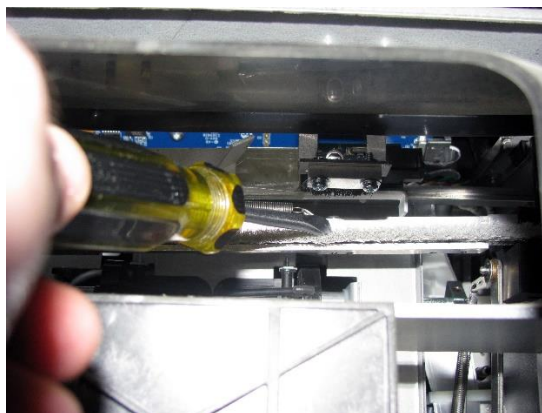Figure 16 Cleaning the Brush Assembly



3. Select the appropriate cotton swab as described. Wet one end of the cotton swab with 99% Isopropyl alcohol.
4. Swab method for cleaning sensor:
 - Gently clean the entire IR temperature sensor surface with the wet end of the cotton swab as depicted in (Figure 17).

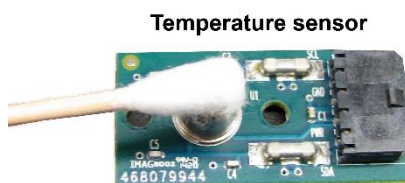Figure 17 Magnified View of Proper Cleaning with Cotton Swab



5. Allow the temperature sensor to dry for 90 seconds then gently clean with the dry end of the cotton swab.
6. Visually inspect the temperature sensor as well as all other areas cleaned to ensure the instrument is free from debris. If there is any question about the cleanliness of the instrument, it should be returned to a dealer or authorized service center.
7. If cleaning is acceptable, return instrument to upright position and replace the drawer.
8. Reconnect power cable and accessory cords.
9. Power on instrument.

IMPORTANT: The foregoing recommendations are provided as a guideline to maintain a robust and quality operating the GAC™ 2700 moisture tester. It should not be interpreted as an exhaustive maintenance program. Dust and debris may periodically accumulate in areas not specified in this manual. The owner is responsible for ensuring overall equipment cleanliness. If any questions arise regarding the maintenance or performance of the instrument, contact your dealer or local authorized service center.

TROUBLESHOOTING

The GAC™ 2700 moisture tester utilizes an RF frequency of 149 MHz to make measurements within the machine. It is not a strong signal strength. If potential interference is determined to originate from the instrument simple corrective steps can be taken; move the products further apart from each other, re-orientate the products to each other.

ERROR CODE	ERROR	PROBABLE CAUSE	CORRECTIVE ACTION
1	Empty Cell Measurement Out of Spec	Moisture or dirt buildup in cell.	Dump grain and verify cell is clean and free of grain in and surrounding the cell.
2	Empty Cell Weight Out of Spec	Empty cell measurement is out of tolerance.	Ensure shipping brackets have been moved to the Unlocked position. Dump grain and verify cell is clean and free of grain in and surrounding the cell.
3	No Products Installed	No product calibrations were found on the machine.	Install product calibration files.
4	Fill Motor Jammed	The motor has stalled while loading grain from a possible obstruction.	Clear blockage from cell.
5	Invalid Grain Calibration File	An invalid calibration file was selected.	Re-install the selected calibration file.
6	Moisture Too High	Measured product is above the moisture upper limit of the calibration.	Verify sample filled the cell.
7	Moisture Too Low	Measured product is below the moisture lower limit of the calibration.	Verify sample filled the cell.
8	Instrument Low Temp Limit Exceeded	Instrument temperature is less than the allowed limit of 2 degrees C.	Move unit to a warmer environment or allow to warm up.
9	Grain High Temp Limit Exceeded	Grain temperature has exceeded the grain calibration specification to analyze grain.	Allow grain to cool and then re-analyze.
10	Grain Low Temp Limit Exceeded	Grain temperature has exceeded the grain calibration specification to analyze grain.	Allow grain to warm and then re-analyze.
11	Sample Weight Too High	Test weight is greater than the range specified for the calibration selected.	Use a more representative sample and re-analyze grain. Verify correct grain calibration is selected.
12	Sample Weight Too Low	Test weight is lower than the range specified for the calibration selected.	Use a more representative sample and re-analyze grain. Verify correct grain calibration is selected.
13	No Communication	An internal communication failure has occurred and communication has been lost.	Power unit off and turn back on to reset.
14	Instrument High Temp Limit Exceeded	Instrument temperature is higher than the allowed limit of 45 degrees C.	Check unit ventilation or move to a cooler environment.
15	Unit to Grain Differential	The difference between grain temperature and machine temperature has exceeded the unit specification to analyze grain.	Allow grain and machine temperature to equalize and then re-analyze.
16	Internal Power Supply Out of Spec	Unit internal voltage is out of specification.	Service is required. Contact DICKEY-john Tech Support at 1-800-637-3302.
17	Unable to Predict Moisture	A corrupt instrument calibration file or other unexpected error.	Dump sample and re-analyze.

ERROR CODE	ERROR	PROBABLE CAUSE	CORRECTIVE ACTION
18	Pre-Analysis Timeout	Power unit off and turn back on to reset.	Contact DICKEY-john Tech Support at 1-800-637-3302 if problem persists.
19	Instrument Needs Updated	Firmware in the instrument is out of date for this application.	Update device with new firmware.
21	File I/O Error	An unexpected file i/o error has occurred.	An obstruction has occurred in the cell. Blockage must be cleared before testing can resume.
22	Error RF Interference	RF interference detected. Unable to compute moisture. Bad relay on cell board could be the issue.	Contact DICKEY-john® Tech Support at 1-800-637-3302 if problem persists.
23	Invalid GAC™ 2700 Moisture Tester Model Number	A software configuration has occurred.	Contact DICKEY-john® Tech Support at 1-800-637-3302.
24	No Locale	A region name is not present in imported Region.ini file.	Contact DICKEY-john® Tech Support at 1-800-637-3302.
25	Could not Create Default Locale	An error has occurred while attempting to create a default locale.	Contact DICKEY-john Tech Support at 1-800-637-3302.
50	Weight Measurement Device Error	An error has occurred with the load cell.	Power unit off and turn back on to reset. Service unit if failure continues.
51	Invalid Password	A service function with an invalid password was attempted.	If service is required, contact DICKEY-john Technical Support at 1-800-637-3302 for assistance on how to obtain the password and proper service procedure.
52	Date/Time Incorrect	The programmed machine date is less than expected.	Program the instrument date and time. If problem persists, then the battery backup for the internal clock may need to be replaced. Contact DICKEY-john Technical Support at 1-800-637-3302 for service.
53	Cold Sample Moisture Too High	The sample is too high in moisture to accurately read at its current temperature.	Warm the sample above the low temperature threshold specified in the product calibration file and rerun the measurement.
55	Dump Motor Timeout	The dump mechanism does not appear to be closing.	Check that the dump motor optical sensor is clean and there is no interference in the dump mechanism. Press the Green button to retry. If error persists, contact DICKEY-john Technical Support at 1-800-637-3302.
56	I/O Board Power Off Error	Power unit off and turn back on to reset.	Contact DICKEY-john Tech Support at 1-800-637-3302 if problem persists.
60	Network Unavailable	Confirm network cables are properly connected.	Verify the network settings are correct.
63	Realtime Moisture Measurement Error	The motor and/or brush has stalled due to a possible obstruction.	Dump the sample using the Abort button on the home screen and clear blockage from cell; re-analyze.
69	Moisture Result Checksum Failed	Results in the database have been corrupted.	Delete the measurement result(s) causing the error from the Analysis Results page. If error persists, contact DICKEY-john Technical Support at 1-800-637-3302.
100	Unexpected Application Crash	The application has encountered an unexpected error.	Press the Initiate (green) button or cycle power to reboot the instrument. If problem persists, contact DICKEY-john Tech Support at 1-800-637-3302.
999	Realtime Error Alert	The measurement cycle failed to complete.	Dump the sample using the Abort button on the home screen; re-analyze.

DICKEY-john[®] WARRANTY

Dealers have the responsibility of calling to the attention of their customers the following warranty prior to acceptance of an order from their customer for any DICKY-john[®] product.

DICKEY-john[®] warrants to the original purchaser for use that, if any part of the product proves to be defective in material or workmanship within one year from date of original installation, and is returned to DICKY-john within 30 days after such defect is discovered, DICKY-john will (at our option) either replace or repair said part. This warranty does not apply to damage resulting from misuse, neglect, accident, or improper installation or maintenance; any expenses or liability for repairs made by outside parties without DICKY-john's written consent; damage to any associated equipment; or lost profits or special damages. Said part will not be considered defective if it substantially fulfills the performance expectations. **THE FOREGOING WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES OF MERCHANTABILITY, FITNESS FOR PURPOSE, AND OF ANY OTHER TYPE, WHETHER EXPRESS OR IMPLIED.** DICKY-john neither assumes nor authorizes anyone to assume for it any other obligation or liability in connection with said part and will not be liable for consequential damages. Purchaser accepts these terms and warranty limitations unless the product is returned within fifteen days for full refund of purchase price.

Operator's Manual

GAC™ 2700-LF

Moisture Tester

