
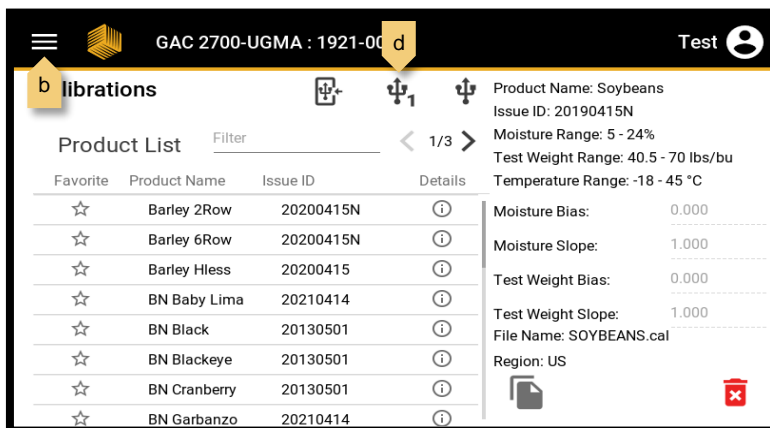
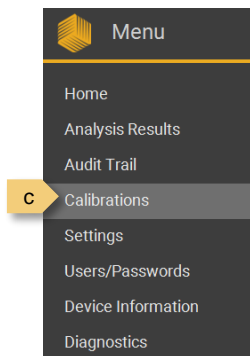




Loading a Single Calibration onto a GAC®2700

- Insert the USB device into the instrument.
- From any screen, press the  button in the upper left corner to open the navigation menu.
- Press **Calibrations** in the navigation menu.

NAVIGATION FROM  SCREEN:



- Press the  symbol at the top of the screen.
- Navigate to the directory where the product file is located then press on the file name to highlight.
- If the product already exists on the instrument, you must check the “Overwrite Existing Files” box or the new file will not load onto the instrument.
- Press  to install the new calibration file onto the instrument.

