


M3-G PMT Utility Download Instructions

To load a new calibration onto the tester you will need to download the software app from our website called “M3G AND M20P PMT UTILITY” onto a Windows based computer. Follow the link below


<https://dickey-john.com/products/moisture-testers/portable-moisture-testers/m3gandm20p/>

Select the download titled M3G AND M20P PMT UTILITY which will place the folder in the “DOWNLOADS” section of your computer. See below:

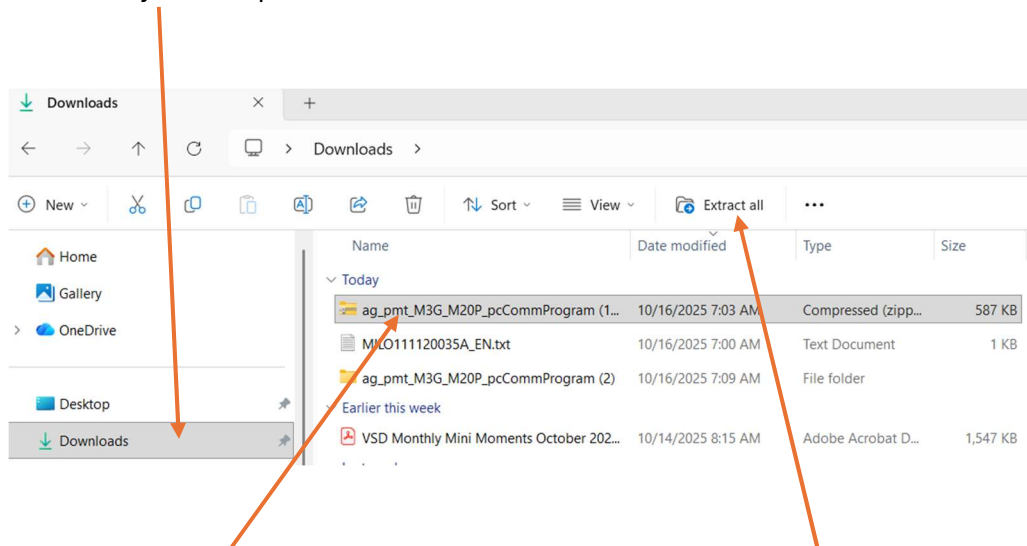


Highlight “Left Click” on the folder then “Click” on the Extract all selection

You should get a window like the following and select EXTRACT.

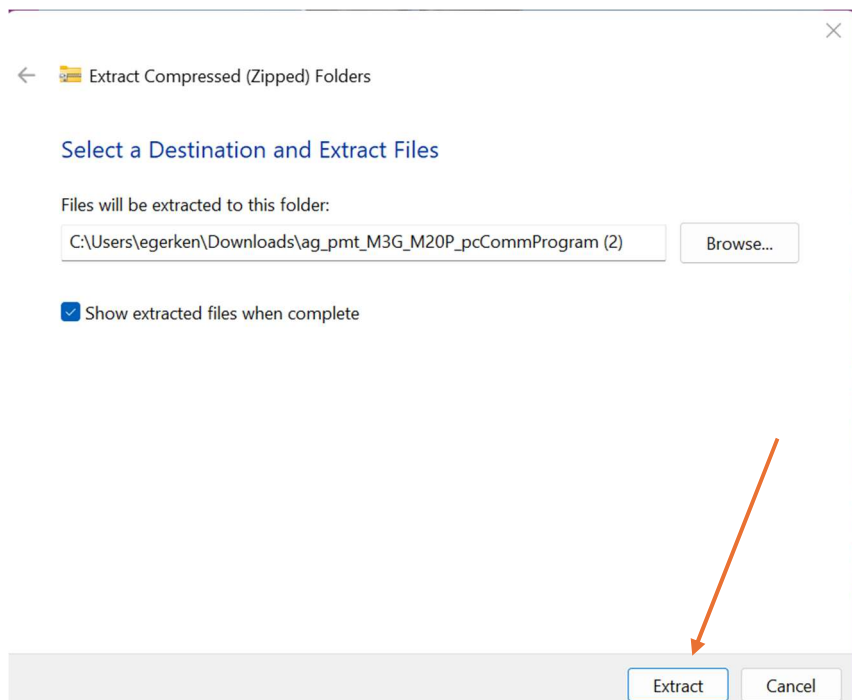


This will bring up a new window which may ask if you want to run the program. Select Run Anyway.

And follow the Prompts from there.

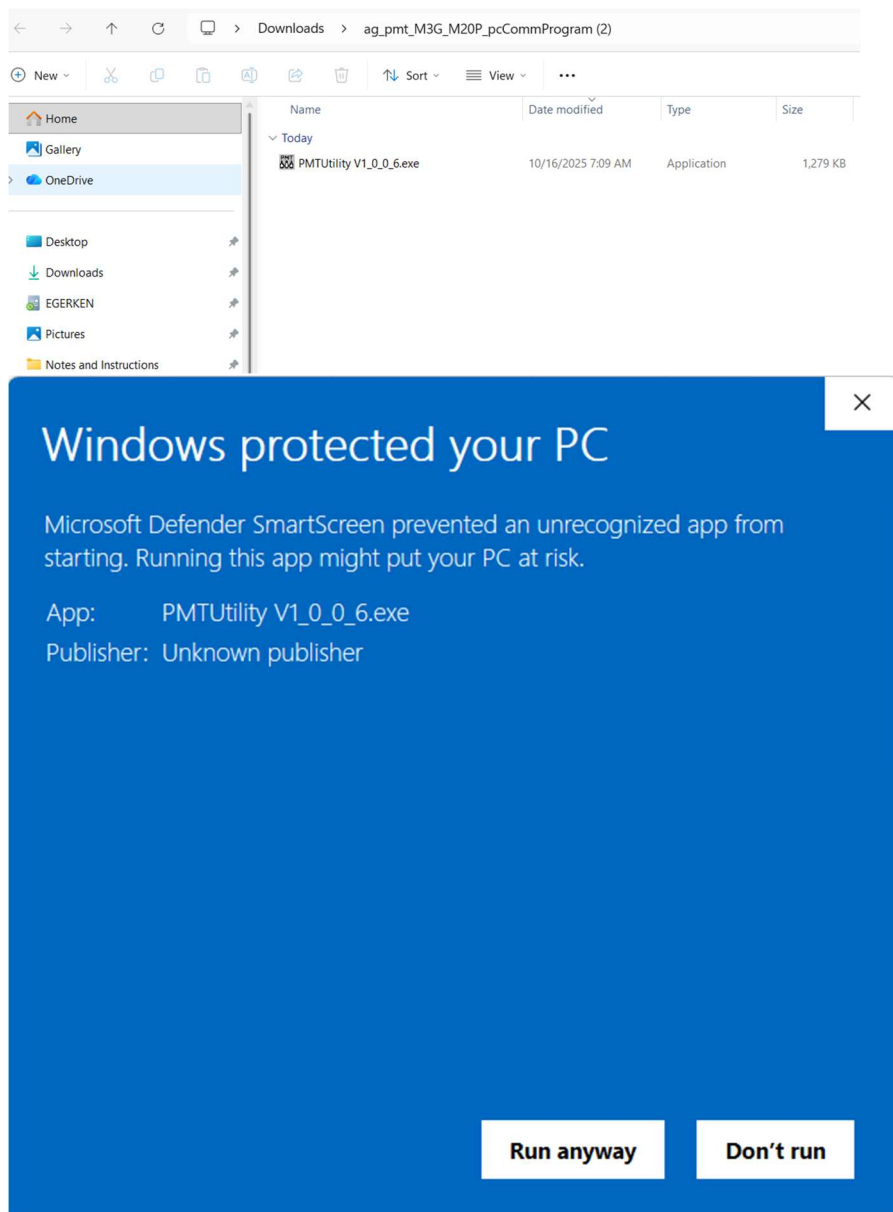


Now plug USB Cable to computer and M3G

1 go to desktop, click on PMT Utility 2 turn on M3G 3

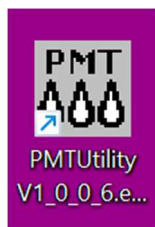

Your screen should look like this below.

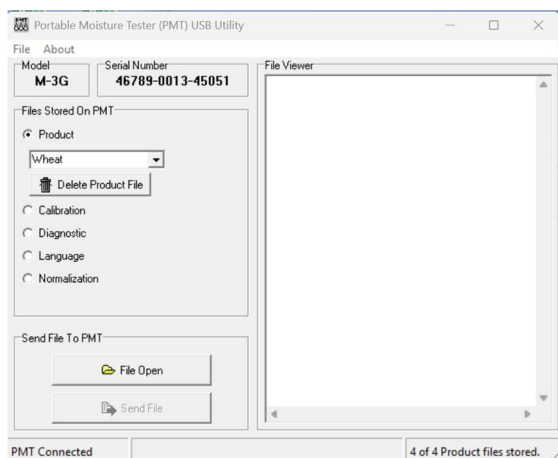

go back to DICKEY-john website in the downloads section for the M-3G and M20_P.

Find the grain download you are looking for and click on the “DOWNLOAD” tab for the grain.

Go back to the PMT utility where it reads Product,

>click the down arrow and select AVAILABLE.

>now click FILE OPEN On the list it should have your grain,

>click that grain. And then

>click OPEN

>then >click SEND FILE

You should now see the new grain in your list of grains.

Repeat the procedure for each grain needed to program in the M3G.