

# INSTRUCTIONS FOR LOADING OFFICIAL CALIBRATION BUNDLES ON GAC®2700 INSTRUMENTS

This instruction provides a step by step instructions for downloading & updating the official grain calibrations on the GAC®2700-UGMA instruments.

These instructions are **not** meant to be used for updating the calibrations on the GAC®2700-AGRI instruments. Calibrations on those instruments should be updated individually instead of as a bundle.

If you have any questions or need assistance, contact our technical support team.


- Phone: 217-438-3371 or 1-800-637-3302
- Email: [djservice@dickey-john.com](mailto:djservice@dickey-john.com)
- Monday-Friday: 7:00 a.m.-7:00 p.m. Central Time
- Saturday: 8:00 a.m.-5:00 p.m. Central Time

---

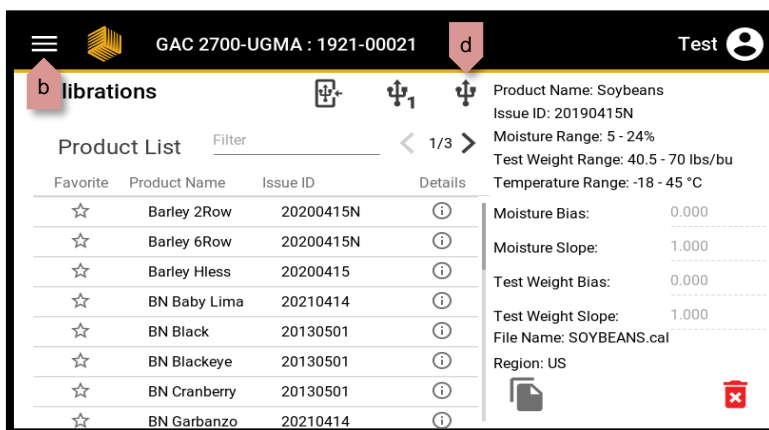
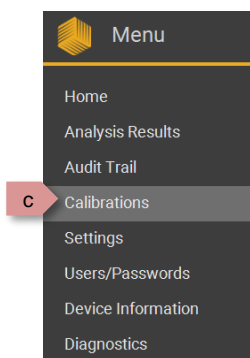
## Download Calibration Bundles



- Insert USB memory device into computer's USB drive
  - Remove all existing files from USB memory device
- Visit the DICKEY-john website at <http://www.dickey-john.com/>
- In the top right-hand corner of the home page, click **download calibrations**
- Select the model type of your instrument from the menu then click **Next**
- Select your country from the drop-down, making sure to follow all notes & comments above the dropdown. Click on **Official Calibration Bundles** so that a dot appears in the circle next to it then click **Next**
- The calibration bundle download page will highlight all of the calibration changes in the bundle since the last official update. **MAKE A NOTE OF THE RELEASE DATE DISPLAYED ON THIS PAGE.**
- Scroll down and press the **Download** button
- Locate the downloaded calibration bundle. Copy all files from the .zip bundle and paste into the root directory of the USB memory device.
  - Root directory (such as F:/) is the first directory that shows when opening a drive.
  - If having issues locating the root directory, go to “Start/My Computer” and open the USB memory device.
- Wait for files to finish copying and then remove USB memory device from the computer.

# Load Calibrations Onto GAC® 2700-UGMA

- Insert the USB device into the instrument.
- From any screen, press the  button in the upper left corner to open the navigation menu.
- Press **Calibrations** in the navigation menu.

## NAVIGATION FROM SCREEN:



- Press the  symbol at the top of the screen to begin loading the calibration bundle saved onto the USB memory stick.
- Press **Yes** to begin installation of new calibration files.
  - Only calibration files in the bundle will be overwritten & updated. All other calibration files will be unaffected.
- Once calibrations are finished loading, remove the USB device from the instrument.
- Press the  button to open the navigation menu the press **Device Information** in the navigation menu.
- Verify that the date displayed with the NTEP Directive Number at the bottom of the screen matched the release date on the calibration bundle download page.

## NAVIGATION FROM SCREEN:

