

GAC™ 500XT

Moisture Tester


Dual Power Portable Moisture Tester

The GAC™ 500XT moisture tester by DICKEY-john® is a small, portable, and affordable device designed for analyzing moisture. Its versatility in utilizing different power sources enables you to obtain measurements from anywhere across your farming operation. With the GAC™ 500XT moisture tester, you can benefit from the same 2 MHz technology found in the GAC 2100 models.

Features and Benefits:

- Dual power options of 110/220 volt AC or DC power
- Can be powered by a 6V vehicle adapter or a wall power outlet
- Memory for 16 different calibrations
- Provides consistency when running samples
- Eliminates pre-weighing with an internal scale
- Preloaded with 10 languages
- Printer connection capabilities



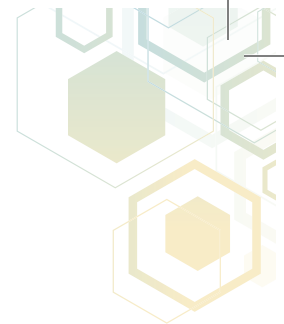

GAC™ 500XT

Grain Moisture Tester

Unbeatable Accuracy

Whether you're harvesting or drying, precision moisture testing is key. For accuracy you can't beat, choose the GAC™ 500XT moisture tester.

Specifications

Measurement Method	Capacitance, conductance, internal scale
Moisture Range	5 – 45% (depending on nut calibrations)
Temperature Compensation	Automatic
Moisture Resolution	0.1% moisture
Sample Size	250 gr. (approx. for cereal grains)
Display	LCD (128 x 64 pixels)
Approximate Dimensions	13.5" H x 10.3" W x 13.8" D (34,5 cm H x 26,5 cm W x 35,0 cm D)
Approximate Weight	13 lbs. (5.78 kg)
Calibrations	16 pre-loaded calibrations

Installation Requirements

Operating Temperature	41 – 113° F (5 – 45° C)
Humidity	5 – 95% non-condensing
Power Supply	Wall mount adapter, 90-264 VAC, 47-63 Hz, 0.4A max 6-volt vehicle adapter, 12-24 VDC

Backed by the power of DICKEY-john®:

When you buy a GAC™ 500XT you get all the dependability and value you expect from DICKEY-john® products. DICKEY-john's advanced technology and superior electronics are backed by a team of expert, in-house mechanical, electrical, software, and test engineers. Made in the U.S.A.



Easy to Use Display



Pull Slide to Test Grain



Release Lever to Dump Grain



5200 Dickey John Road
Auburn, IL 62615
www.dickey-john.com

+1 217-438-3371
+1 217-438-6012 fax
©2023 DICKEY-john

DICKEY-john and the DICKEY-john Logo are registered trademarks of TSI Incorporated in the United States and may be protected under other country's trademark registrations.

5003051 Rev A
4799154892