



DICKY-john®
A DIVISION OF TSI®



Operator's Manual

GAC™ 2700-INTL
Grain Analysis Computer

CONTENTS

SAFETY NOTICES	2
Description of Caution/Warning Symbols	2
Liability	3
INTRODUCTION	4
Accessories	4
Unit Overview	4
Features	5
Specifications	5
Grain Calibrations	5
Regulatory Compliance Information	6
External Communication Connections	7
Unpacking	8
Packing List	8
Setting up the GAC™ 2700-INTL Unit	9
Initial Setup	11
Conducting Grain Analyses	12
NAVIGATION	13
Using External Devices	15
On-Screen Keyboard	15
Touch Screen Button Functions	16
ANALYSIS RESULTS	17
AUDIT TRAIL	19
CALIBRATIONS	21
SETTINGS	24
Regions	25
Languages	25
Samples/Results	26
Units	27
Power Management	28
Printers	29
Date/Time	32
Owner Information	33
Rapid Analysis Mode	34
USERS/PASSWORDS	36
Users	37
Roles	39
Password Policy Menu	41
DEVICE INFORMATION	43
DIAGNOSTICS	44
CLEANING / MAINTENANCE	45
External Cleaning	46
Internal Cleaning	46
Daily Clean Method	47
Extensive Cleaning Method	47
Cleaning the Temperature Sensor Probe	51
TROUBLESHOOTING	54
DICKEY-john® WARRANTY	56

SAFETY NOTICES

Safety notices are one of the primary ways to call attention to potential hazards. An absence of specific alerts does not mean that there are no safety risks involved.

This product is intended for indoor use.

Description of Caution/Warning Symbols



This Safety Alert Symbol identifies important safety messages in this manual. When you see this symbol, carefully read the message that follows. Be alert to the possibility of personal injury or death.



Use of the word **WARNING** indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



Use of the word **CAUTION** with the Safety Alert Symbol indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.



Use of the word **NOTICE** without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in equipment damage.

DISCLAIMER

DICKEY-john® reserves the right to make engineering refinements or procedural changes that may not be reflected in this manual. Material included in this manual is for informational purposes and is subject to change without notice.



Access permitted by authorized service personnel only
Accès autorisé par le personnel de service autorisé seulement

Liability

DICKEY-john® designed the **GAC™** 2700-INTL moisture tester to measure moisture content in grains, oilseeds, and other products. We rigorously test and calibrate each instrument before it leaves the factory. Use of the instrument in the field, however, is subject to environmental and operating conditions beyond our control. DICKY-john® disclaims all liability for damages resulting from environmental and operating conditions beyond our control and for any damages that might follow incorrect results due to those environmental or operational conditions. **IN NO EVENT SHALL DICKY-john® OR ANY OF ITS AFFILIATES, OFFICERS, DIRECTORS, SUCCESSORS OR ASSIGNS BE LIABLE FOR ANY DAMAGES WHATSOEVER, INCLUDING SPECIAL, INDIRECT, CONSEQUENTIAL OR INCIDENTAL DAMAGES OR DAMAGES FOR LOSS OF PROFITS, REVENUE, USE, OR DATA AS A RESULT OF CLAIMS, REGARDLESS OF THEORY BROUGHT, ARISING OUT OF OR CONNECTED WITH ANY USE OR RELIANCE ON THE GAC™ 2700-INTL MOISTURE TESTER.**

The operator is responsible for ensuring the results of the testing are as accurate as possible by following approved maintenance procedures on a regular basis, making sure the calibrations are up to date and the latest version is being utilized, by cleaning the instrument and its sensors on a regular and as-needed basis depending on the amount of dust, dirt, and debris encountered in the instrument's use, by monitoring performance using daily check samples and by adhering to the check procedures set forth in the manual. As with any kind of precision instrument, optimal results depend in part on proper cleaning and maintenance.

For questions concerning these issues, refer to the product warranty, or call your DICKY-john® representative.

INTRODUCTION

The DICKEY-john® Grain Analysis Computer **GAC™** 2700-INTL moisture tester quickly tests grain and automatically calculates moisture content, grain temperature, and test weight (bulk density) of the sample. The unit prompts for sample loading, tests the sample, and displays the results.

Accessories

The following list of components are included with the unit or can be ordered as replacement parts:

- Region specific power cord (varies)
- Multi-language pamphlet p/n 6017932
- Cleaning brush p/n 206410003
- Grain drawer p/n 468071541
- Grain drawer bottomless (optional) p/n 468071542
- Allen wrench (5/32") p/n 468072300

Replacement parts can be obtained by contacting your dealer or distributor.

Only use approved DICKEY-john® AC power cords when operating the unit. Please see your authorized service center for a list of approved part numbers.

Unit Overview

1. Power (on/off) button
2. Hopper
3. Hopper full sensors
4. Touch screen display
5. USB connections (2) front (2) back
6. Sample drawer
7. Bubble level
8. Adjustment feet (4)

Figure 1 GAC™ 2700-INTL Moisture Tester Overview (Front of Unit)



Features

- Utilizes 149 MHz technology, developed by the USDA
- Rapid Analysis Mode reduces the need to touch the instrument
- Advanced instrument security protects the **GAC™** 2700-INTL from tampering, adding layers of protection to commercial transactions
- Large 7" touch screen display for greater visibility and responsiveness
- Measurement results in less than 20 seconds
- Modern, intuitive operator interface simplifies training and daily operation
- Memory storage for up to 5,000 measurements
- Region architecture that allows custom list of version-controlled calibrations with limited editability
- Multiple USB ports on the front and back of the unit for software upgrades, USB devices, printer and peripherals
- Barcode scanner capability to expedite processing time

Specifications

- Operating temperature: 2 to 45 degrees C (36 to 113 degrees F)
- Power: 110/220V, 50/60 Hz, 30/35 VA, 36 W Max
- Humidity: 20 to 90% noncondensing
- Grain temperature: -20 degrees to +45 degrees C (-4 degrees F to +113 degrees F) depending on grain calibrations
- Storage/transit temperature: -20 to +60 degrees C (-4 to +140 degrees F)
- Moisture range: 5 to 45% (grain dependent)
- Approximate Weight: 25 lbs.(11.43 kg)
- Approximate dimensions: 17"H x 19"W x 14"D
- IP rating: IPX0
- Altitude: Max Altitude 6,561ft (2000m)

Grain Calibrations

Please refer to the calibrations page on the DICKEY-john® website for a complete list of calibrations for the **GAC™** 2700-INTL moisture tester which can be transferred to the unit via USB memory device.

Regulatory Compliance Information

The **GAC™** 2700-INTL moisture tester is in conformity with the provisions of the following directives and regulations:

Safety

- 2014/35/EU - Low Voltage Directive (LVD)
- EN 61010-1:2010:A1:2019 - Safety requirements for electrical equipment for measurement, control, and laboratory use
- UL 61010-1
- CAN/CSA-C22.2 No 61010-1 + Amd 1
- CB – IEC 61010-1:2010/AMD1:2016, Certificate # US/8703/ITS

EMC Emissions

- 2014/30/EU - Electromagnetic Compatibility (EMC) Directive
- EN 61326-1:2021 Class B Group 2 (Electrical Equipment for Measurement, Control, and Laboratory use)
- FCC Part 18.305
- ICES-001:2020 Class B Group 2
- CISPR11, Group 2, Class B
- EN 61000-3-2:2014
- EN 61000-3-3:2013

This device complies with part 18 of the FCC Rules.

EMC Immunity

- 2014/30/EU - Electromagnetic Compatibility (EMC) Directive
- EN 61326-1:2021, Industrial Levels (Electrical Equipment for Measurement, Control, and Laboratory use)

The **GAC™** 2700-INTL moisture tester product series is exempted from the Radio Equipment Directive 2014/53/EU as the RF signal internal to the product is not used for communications. The RF signal power is below the threshold limit to be of concern for EMF Directive 2013/35/EU and therefore no MPE calculation was determined necessary.

RoHS

We, TSI® Incorporated, hereby declare that the **GAC™** 2700-INTL moisture tester product and all product variants are in full compliance with RoHS Directive 2011/65/EU with Amendment EU Directive 2015/863/EU.

WEEE

- 2012/19/EU

The Declaration of Conformity is available upon request.

External Communication Connections

- 4 USB-A ports (2 in front, 2 in back) to connect a keyboard, mouse, printer or flash drive.
- 1 USB-C port to connect the **GAC™** 2700-INTL moisture tester to a PC for downloading of software to the device, installing calibrations, or remotely accessing data from the instrument (Authorized Service Centers Only).
- 1 RJ45 Ethernet jack for connection to LAN (Future Availability)
- 1 RS232 serial port printer connection

Note: USB, Ethernet, and serial (RS-232) cable lengths are recommended to be less than three meters.

Figure 2 External Communication Connections (Back of Unit)



NOTICE

Be sure to leave enough space around the rear of the instrument to avoid damage to the input power connector and to facilitate easy disconnection of the unit.

Unpacking

Carefully unpack the **GAC™** 2700-INTL unit. Refer to the packing list below to verify that all items are present. Contact DICKEY-john® if items are missing or broken.

Retain the packaging for use when shipping the instrument; use of other packaging for shipment may result in damage to the instrument.

Packing List


Qty	Description
1	Model GAC™ 2700-INTL Grain Moisture Tester
1	Multi Language Pamphlet
1	Region Specific Power Cord (varies)
1	Allen Wrench
1	Cleaning Brush
1	Grain Drawer

Setting up the **GAC™** 2700-INTL Unit

Setting up the **GAC™** 2700-INTL moisture tester requires the following procedures:

1. Open the carton and remove the Allen wrench from the upper foam insert.
2. Remove the **GAC™** 2700-INTL unit from the plastic bag. Save the bag, the packaging material, and the carton to use for future transport of the instrument.
3. Ensure the installation location is level using the bubble level at the top of the instrument; adjust the feet if necessary. Unit must be kept level, making sure that there is sufficient clearance between the **GAC™** 2700-INTL moisture tester and the countertop so that the grain drawer is cleanly inserted into the instrument.
4. Remove the grain drawer and place the unit gently on backside to locate the shipping brackets on the left and right-side walls.

IMPORTANT: Be careful when placing the unit on its backside to avoid damage to the security switch.

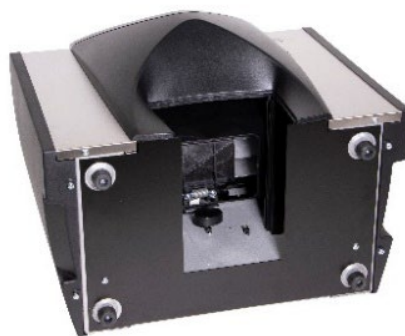

5. Loosen and then remove the hex bolt from the bracket on the left side wall.



6. Press down on the bracket to release.



7. Slide the bracket toward the bottom of the instrument.



8. Insert the hex bolt into the operating location hold and tighten using the Allen wrench.



9. Perform the same procedure to the bracket on the right-side wall.
10. Once both brackets are tightened to the operating location, place unit upright.

Reverse the process to re-install the brackets for transportation.
This locks the weighing mechanism to prevent damage when moving.



Initial Setup


Once the unit is powered up, the unit will already be logged into the default user profile. This default user can run samples and access most functions of the unit.

The default user will be logged into each time the unit is restarted.

There is also an Admin user profile installed on the unit with a blank password that can access all functions.


To access all functions of the unit:

1. Press  in the upper right-hand part of the screen.
2. Press the **Log Out** button to exit the default profile.
Note: Once logged out, you can only return to the default user by restarting the unit.
3. Press  again to access the Login page.
4. Select “**Admin**” from the list of user profiles.
5. Press the **Login** button to start using the instrument.

Note: Setup a custom user name and password, go to the drop-down menu  (upper left) and press “Users/Passwords”. Refer to the Users/Passwords section for additional information.




Conducting Grain Analyses

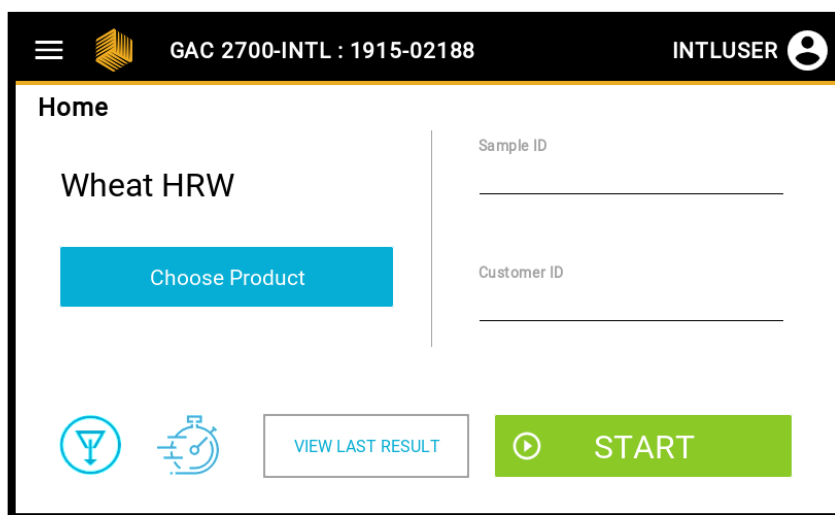The **GAC™** 2700-INTL moisture tester is designed to provide minimal user interaction to run grain moisture measurements. From the Home screen:



1. Press the **Choose Product** button to select the grain or crop that will be analyzed.
2. Enter **Sample ID** (If desired).
3. Enter **Customer ID** (If desired).
4. Pour the sample into the Upper Hopper.
5. The **START** button will change to Green when there is enough grain in the hopper to properly run a sample.
6. Press the **START** button.

Other Home Screen Icons:

 Dump Button	Press to transfer the sample from the upper hopper to the grain drawer. This is helpful if the user decides not to measure the sample of grain or needs to clear the grain cell.
 Rapid Analysis Mode	Operational mode where select calibrations are available at a single touch to increase the speed and throughput of the instrument.
 VIEW LAST RESULT	Press this button to review the results from the last sample that was run through the GAC™ 2700-INTL moisture tester.

NAVIGATION

The user interacts with the **GAC™** 2700-INTL moisture tester using the LCD touch screen display. Screen interaction by finger touch.

Refer to Maintenance section for cleaning display.


NOTICE

Do not use any sharp objects on the display. Damage to screen can result.







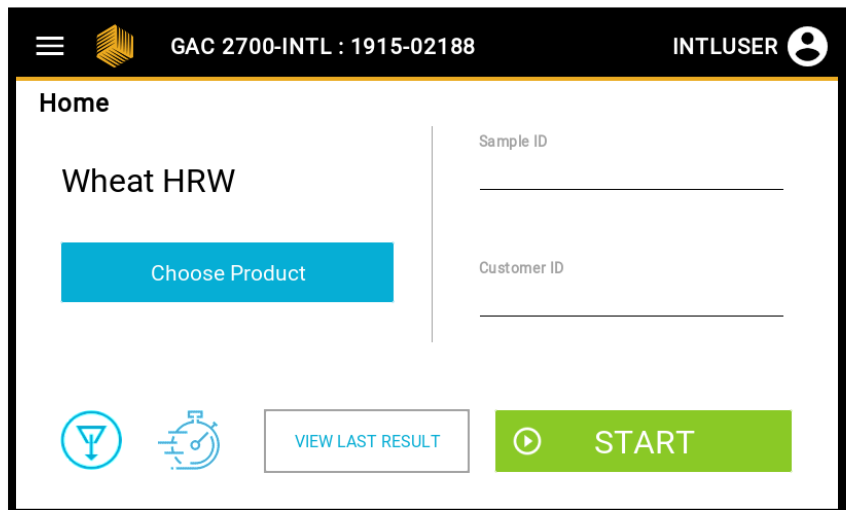


The following methods allow navigation through and interface with the unit:

1. Text input boxes
2. Buttons
3. Keyboard

Figure 3 LCD Touch Screen Display



The default view for the **GAC™** 2700-INTL moisture tester is the Home screen as described above. In order to conduct a measurement, the user will need to follow the following steps.


Operation	Description
	<p>Press this button to select the grain desired for moisture measurement. A pop-up window will appear showing all grain calibrations installed on the instrument. Press Grain Name and the product calibration will automatically transfer to the home screen for analysis.</p>
	<p>Press the line to bring up a keyboard if it is desired to track the identification of the sample. Type using the keyboard and press .</p>
	<p>Press the line to bring up a keyboard if it is desired to track the identification of the customer. Type using the keyboard and press .</p>
 <p>Dump Button</p>	<p>Press to transfer the sample from the upper hopper to the grain drawer. This is helpful if the user decides not to measure the sample of grain.</p>
 <p>Rapid Analysis Mode</p>	<p>New for the GAC™ 2700-INTL moisture tester is an operational mode where the user has very limited physical contact with the instrument. This is helpful to increase the speed and throughput of the instrument.</p>
	<p>Press this button to review the results from the last sample that was run through the GAC™ 2700-INTL moisture tester.</p>
	<p>Press this button to initiate the measurement process. This button will turn Green when the instrument is ready to take a measurement. If the button is Yellow, text will be displayed to indicate action necessary to conduct a grain measurement.</p>

Using External Devices





The following external devices can be used to enter data and navigate through the screens by connecting to the USB ports (2 front / 2 back):

- Keyboard
- Mouse
- Barcode Scanner

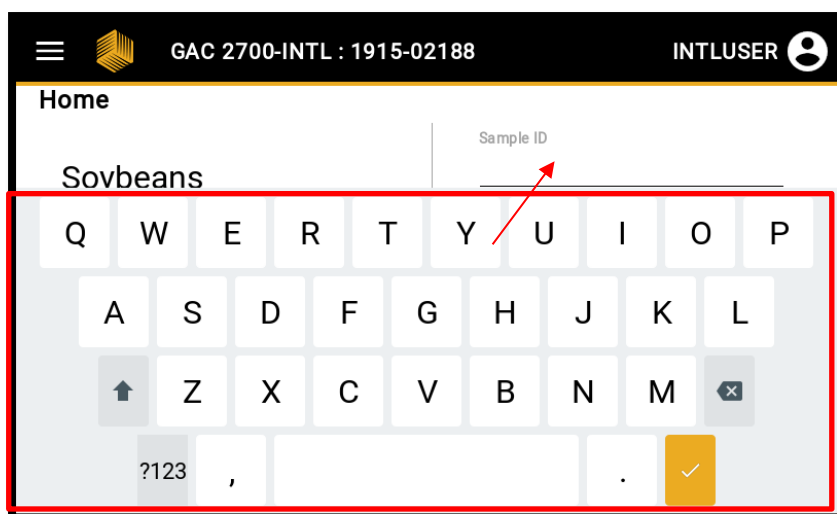
















On-Screen Keyboard



Select the line to bring up keyboard and to enter content.


Icon	Description
	Upper Case/Lower Case button is available to switch between upper/lower case letters.
	Delete button is used to delete letter or space.
	Enter button is used to return to the screen and close out of the keyboard option.
	Spacebar button is used to add spaces between letters/words.









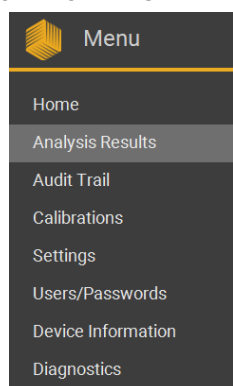


Touch Screen Button Functions

Icon	Description
	Home button is available on most screens and, when pressed, returns to the Main screen.
	Drop-down Menu - press this button to select the desired menu option.
	Date - press to change the date.
	Time - press to change the time.
	Print button allows printing test results to a local printer. Refer to the Setup section for print requirements.
	Left button returns to the previous option within the screen.
	Right button advances to the next option within the screen.
	Dump button dumps grain from hopper and empties the cell in the event of an error.
	Press to navigate to Rapid Analysis Mode . Rapid Analysis Mode is described in more detail later in the manual.
	Drawer Full Button - The button is programmed to turn Blue when the drawer is in the condition required for measurement to occur. The button will be gray when it needs to be emptied. The purpose of the button is to ensure that grain does not overflow the drawer into the instrument and onto the workspace.
	Moisture
	Test Weight
	Temperature
	USB button is used when installing or exporting calibrations or result data to a USB memory device.
	User button appears on the Main Menu screen only if a User ID has been enabled in System Setup.
	Details - press to view additional results or calibration data.
	Filter - press to filter between data.



ANALYSIS RESULTS




NAVIGATION FROM  SCREEN:



GAC 2700-INTL : 1915-02188						INTLUSER 
Analysis Results						
 Product Filter		Advanced Filter		< 1/1 >	 	
Product	Date/Time	Moisture	Test Weight	Temperature	Details	
Wheat HRW	06/10/2024 4:30:50 PM	9.5 %	63.2 lbs/bu	76.1 °F		
Wheat SW	06/10/2024 4:29:55 PM	9.7 %	63.0 lbs/bu	76.2 °F		
Buckwheat Gr	06/10/2024 4:29:08 PM	10.2 %	63.1 lbs/bu	75.8 °F		
Wheat HRW	06/10/2024 4:28:21 PM	9.5 %	63.2 lbs/bu	75.5 °F		
Wheat HRW	06/10/2024 4:27:26 PM	9.4 %	63.3 lbs/bu	76.2 °F		
Wheat HRW	06/10/2024	9.5 %	63.4 lbs/bu	75.1 °F		


The **GAC™** 2700-INTL moisture tester is equipped with memory to store approximately 5,000 moisture measurement results consisting of all parameters of the measurement. Items such as the grain name, moisture and test weight results, the temperature of the grain at time of measurement, user ID, sample, ID, etc. are all available on this screen.










Operation	Description
Default View	Results are listed in sequential order.
Sorting	Results can be sorted by pressing on any of the column headers. Switch between Increasing and Decreasing by clicking on the Column Header.
Details	Press  to view additional data (User ID, Sample ID, etc.)
Filter	Press the word “Filter” to search for a specific product calibration, etc. After the click, the keyboard is displayed. Type in the desired words and select  to execute the Filter action.
Advanced Filter	Press to filter the results by a certain amount of days (24 hour increments), a specific number of results, or even by name of the user.

Download	<p>Press  to download results to USB memory device.</p> <p><i>Note: Results will be downloaded in the format as specified in the Settings Page.</i></p>
Print	<p>Press  to send results to installed printer, third party scale or financial management software system.</p>
Delete Records	<p>Press  to delete results. Enter the quantity of result records to delete in the dialog box that appears on the screen. Results will be deleted starting with the oldest in the database.</p>



AUDIT TRAIL

NAVIGATION FROM  SCREEN:

	Menu
	Home
	Analysis Results
	Audit Trail
	Calibrations
	Settings
	Users/Passwords
	Device Information
	Diagnostics



		GAC 2700-INTL : 1915-02188	INTLUSER 
Audit Trail 			
 Description Filter		Advanced Filter	 1/4   
Event Id	Event Type	Description	Timestamp
92	Settings	Settings: New: "AutoSequenceSampled": true, <=> Old: "AutoSequenceSampled": false	06/10/2024 4:24:50 PM
91	Settings	Settings: New: "CustomerIdRequiredToPerformAnalysis": true, <=> Old: "CustomerIdRequiredToPerformAnalysis": false	06/10/2024 4:24:19 PM
90	Service	Copied file to USB Flash Drive: sourcePathAndFilename = /opt/save/s	06/10/2024 4:19:09 PM
89	Calibration	Product calibration bundle successfully imported 65 products.	06/10/2024 3:37:03 PM
88	OfficialCalibration	Moisture calibration Wheat SW, ID 20240410N imported successfully	06/10/2024 3:37:01 PM

The **GAC™** 2700-INTL moisture tester records all metrological events to an Audit Log database in order to comply with regulatory requirements for commercial grain trade around the world. The list of events saved to this database include calibration additions, software updates, calibration modifications, service events, error messaging, and changes made to instrument settings. This database is available for easy viewing by field inspectors but cannot be erased by users.

Operation	Description
Default View	Events are listed in sequential order as of the time of occurrence.
Sorting	Events can be sorted by clicking the column headers. Switch between Increasing and Decreasing by clicking on the Column Header.
Actions	Press on the individual record to display additional information for each Event logged by the GAC™ 2700-INTL moisture tester.
Filter	Press the word “Filter” to search for a specific event. After the click, the keyboard is displayed. Type in the desired words and click Enter to execute the Filter action.
Advanced Filter	<p>Press to filter the results by the type of Event: NTEP event, calibration changes, error messages, etc.</p> <p>Last Number of Days – Toggle to filter by a specific length of time.</p> <p>Max Number of Results – Toggle to filter by to a certain amount of results. <i>Note: Best results are achieved when the Last Number of Days is toggled jointly with this filter.</i></p>
Download	Press  to download Events to USB memory device.
Print	Press  to send events to installed printer or third-party scale management or financial accounting software system.

CALIBRATIONS

NAVIGATION FROM  SCREEN:

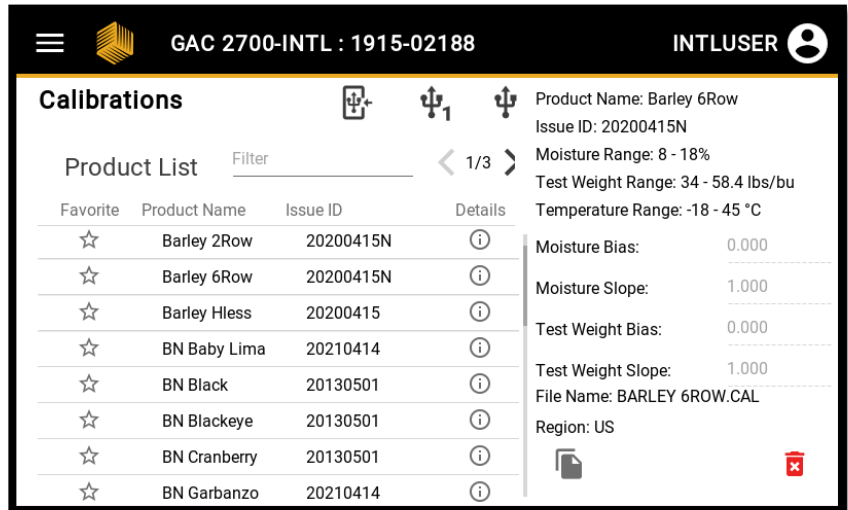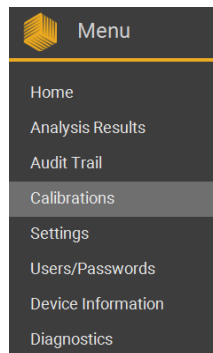







The **GAC™** 2700-INTL moisture tester is shipped with product calibrations that are tied to specific regions of the world. By selecting your region in the Settings, the **GAC™** 2700-INTL unit automatically displays the relevant group of calibrations tied to that region. In many instances, this list includes both Official and Unofficial calibrations:






- **Official:** Specific calibrations that have been approved by the regulatory agency who is responsible to ensure legality within commercial grain trade, or have been set as official to prevent modification. These calibrations can only be created or modified by DICKEY-john® personnel. They cannot be edited by users, distributors, or Authorized Service Centers. These calibrations may have a letter after the Issue ID that designates them as Official. For example: Official calibrations in the United States have the letter "N" at the end of the Issue ID.
- **Unofficial:** All other calibrations that have been created for moisture analysis of grain and other crops. Users are able to modify parameters of these calibrations.

Users are able to use this menu to view detailed information of the currently installed grain calibrations, add new calibrations, modify existing calibrations, or to delete calibrations.

HELPFUL TIP: Additional calibrations are available for download at the DICKEY-john® calibration website:



<https://dickey-john.com/service-support/calibrations/>.

Operation	Description
Calibration List	<p>List of calibrations installed on the current region of the GAC™ 2700-INTL moisture tester. Scroll through the list to find the desired calibration.</p> <p><i>Note: For more information on how to change regions, please see Settings section of this manual.</i></p>
Calibration Details	<p>Press either the calibration name or  to view specific details regarding the calibration.</p> <p><i>Note: These details cannot be modified for Official calibrations.</i></p>
Delete	<p>Once a calibration has been selected to view the details, the  button is displayed on the screen. Press this button to permanently delete a calibration from the GAC™ 2700-INTL moisture tester.</p> <p><i>Note: The GAC™ 2700-INTL moisture tester is programmed to require the user to press the delete button twice as a safeguard to prevent unintended calibration deletion.</i></p>
Modify Existing Calibrations	<p>The GAC 2700-INTL moisture tester will permit the user to modify existing calibrations as long as the calibration is an Unofficial calibration.</p> <ol style="list-style-type: none"> 1. Press the desired calibration name so the details screen is displayed. If the calibration is Unofficial, then the Bias & Slope values for the moisture and test weight parameters will be in black font. 2. Press on the line to bring up a keyboard to modify the bias or the slope. 3. Press  to save the value. 4. Press  to save the calibration. <p>Pressing  will delete the modifications from the GAC 2700-INTL moisture tester.</p> <p><i>Note: The GAC 2700-INTL moisture tester is designed to prevent users from modifying Official calibrations. If the user desires to modify an Official calibration, then a new name and Issue ID for that calibration will be prompted when  is pressed.</i></p>

Copy Icon	<p>The GAC™ 2700-INTL moisture tester will permit the user to create a new calibration based upon a previously created calibration.</p> <ol style="list-style-type: none"> 1. The user should first select the desired calibration to copy. 2. Press . 3. Enter a name for the new calibration. <i>Note: The GAC™ 2700-INTL moisture tester will always default to “New” in the name.</i> 4. Enter an Issue ID for the new calibration. <i>Note: The GAC™ 2700-INTL moisture tester will default to the current date.</i> 5. Press  to save the calibration to the GAC 2700-INTL moisture tester.
Sorting by Column Header	<p>Press the column header (Favorite, Product Name, etc.) to sort the calibration list by the identifier. Press the header twice to switch between ascending and descending values.</p>
Filter	<p>Press the line, type in the calibration name on the on-screen keyboard, press the Enter key, and the GAC 2700-INTL moisture tester will display calibrations installed in the region. This is helpful to save the user time if multiple calibrations have been downloaded onto the GAC 2700-INTL moisture tester for the same grain such as low moisture, regular moisture, or high moisture.</p>
USB Symbol	<p>Press  to access calibration bundles saved on a USB memory stick inserted into one of the USB-A ports of the GAC 2700-INTL moisture tester. Follow the on-screen prompts to download the calibrations to the GAC 2700-INTL moisture tester.</p> <p>Press  to upload a single calibration.</p> <p>Press  to export calibrations to a USB memory stick.</p>

SETTINGS

NAVIGATION FROM  SCREEN:

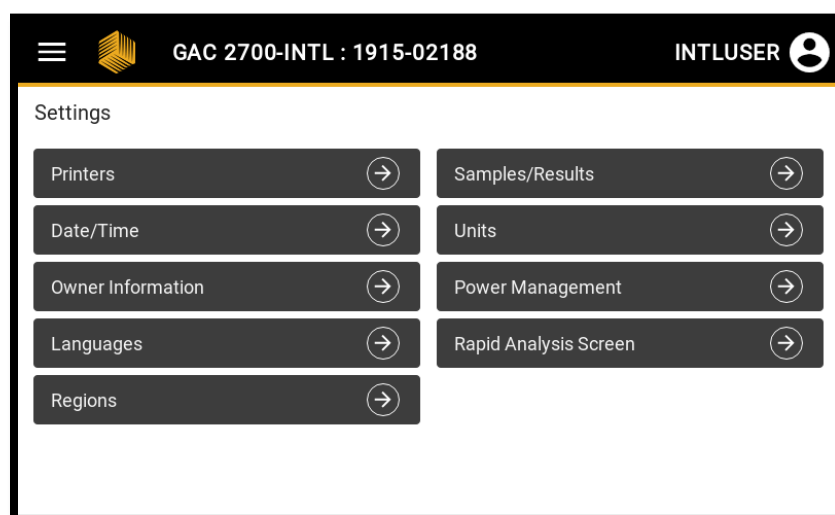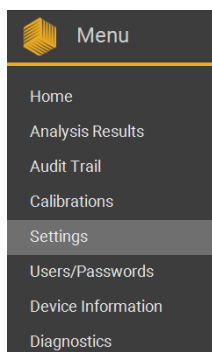

The **GAC™** 2700-INTL moisture tester can be configured to meet the needs of any application globally where grain or crops are analyzed to determine moisture content. Because operators are able to configure the **GAC™** 2700-INTL moisture tester specifically to their operational needs, they are able to realize time, labor, and other resource savings.

Operation	Settings to Change
Regions	Set the Region for the GAC™ 2700-INTL moisture tester, which controls which calibrations are available.
Languages	Change the on-screen language
Samples / Results	Configure the functionality of the GAC 2700-INTL moisture tester prior to and post measurement.
Units	Configure the GAC 2700-INTL moisture tester for imperial or metric units.
Power Management	Adjust the screen brightness for readability based upon the specific lighting of the application.
Printers	Configure the data stream output of the GAC 2700-INTL moisture tester to a printer or third-party software program.
Date/Time	Align the instrument date / time with the application. The date and time are recorded during each grain measurement.
Owner Information	Enter name, address, and other relevant information on the application where the GAC 2700-INTL moisture tester is used.
Rapid Analysis Screen	Add/Subtract the grain calibrations that will be shown on the Rapid Analysis Mode screen.

Regions

Regions

Please select a region

US

Region US

Valid for 01/01/2001 - 12/31/2099

Governing Body Name NTEP

Governing Body Symbol ---

Cancel Save

The **GAC™** 2700-INTL moisture tester utilizes a feature called “Regions” that enables customized configurations to support regulatory and user requirements in various countries around the world. These requirements may include units, calibrations, passwords, and instrument settings. These Regions can only be created by DICKEY-john®. To see the full list of regions supported contact DICKEY-john or your local Authorized Service Center. To change the region, select the drop-down button, select the desired region and select Save. Select cancel to exit the menu with no changes.

Languages

Languages

Please select a language

English - US (en-US)

Reload Default Languages

Cancel Save

Note: There are a few screens that only appear in English, such as the Diagnostics page.

Language settings controls the on-screen language display and keyboard. Select drop down to select the desired language and select save. Select cancel to exit the menu with no changes.

Samples/Results

GAC 2700-INTL : 1915-02188 INTLUSER

Samples/Results

Results Settings




- ☐ Automatically Return Home After Measurement
- < 6 >
- ☒ Display Test Weight on Result
- ☒ Display Temperature on Result
- ☐ Ignore Drawer Sensor
- Number of Drops Before Drawer Must Be Emptied
- < 1 >

Sample Settings

- ☒ Sample ID Required
- ☐ Automatically Sequence Sample ID
- ☐ Customer ID Required
- ☐ Automatically Analyze When Hopper Full
- ☐ Enable Extra Strike-Off After Measurement

Cancel Save

Note: Some of these settings may not be able to be changed by the operator due to specific regulatory requirements.

The **GAC™** 2700-INTL moisture tester is designed to provide advanced customization options based upon operator preferences, application requirements, or regulatory specifications. The operator is permitted to change both the operation pre-measurement (sample settings) and post measurement (results settings). The settings in this screen are adjusted using a Toggle Bar: Press  to toggle between Off () and On (). Settings in black font can be modified while setting in gray font cannot be modified.

Operation	Process to Change the Setting
Automatically Return to Dashboard	Toggle to force the GAC™ 2700-INTL moisture tester to return back to the Home page between 1 to 20 seconds after each measurement.
Display Test Weight on Result	Toggle to the On position so that the GAC™ 2700-INTL moisture tester will display the Test Weight value of each measurement on the Results screen.
Display Temperature on Result	Toggle to the On position so that the GAC 2700-INTL moisture tester will display the temperature value of each measurement on the Results screen.
Ignore Drawer Sensor	Toggle to permit the grain measurement process without the drawer inserted into the instrument. This is useful for operations that utilize a bottomless drawer. <i>Note: Selecting this option without a grain collection process in place will result in grain spillage on the counter.</i>
# of Drops Before Grain Drawer Must Be Emptied	Determine the quantity of samples that can be run before the GAC 2700-INTL moisture tester will require that the grain drawer be emptied to prevent grain mess on the counter. The first option is the infinity symbol, which should be selected if the instrument will be used in Bottomless Drawer Mode. The other options are 1 drop or 3 drops.

Sample ID Required	Toggle to require the operator to enter an identification (ID) for each sample prior to analysis start.
Automatically Sequence Sample ID	Toggle to have the GAC™ 2700-INTL moisture tester automatically increase the increments of the Sample ID. The GAC™ 2700-INTL moisture tester is capable of detecting numbers in the sample ID and then will automatically increase the number if this feature is enabled.
Customer ID Required	Toggle to require the operator to enter an identification (ID) for each customer prior to analysis start.
Automatically Analyze When Hopper Full	Toggle to enable the GAC™ 2700-INTL moisture tester to operate an analysis without depressing of the “Start” button.
Cancel	Select to exit the menu with no changes
Save	Select to save the changes

Units


The screenshot shows the 'Units' menu of the GAC 2700-INTL moisture tester. The menu is titled 'Units' and contains five sections, each with two radio button options. The 'Date Format' section has 'MM/DD/YYYY' selected. The 'Radix Point' section has 'Radix is \',' selected. The 'Moisture Format' section has 'X.X' selected. The 'Temperature' section has 'Fahrenheit' selected. The 'Test Weight Format' section has 'lbs/bu' selected. At the bottom, there are 'Cancel' and 'Save' buttons.

The **GAC** 2700-INTL moisture tester is capable of delivering results in both imperial and metric units in order to meet the needs of the global grain moisture measurement market. Settings in black font can be modified while setting in gray font cannot be modified.

Operation	Process to Change the Setting
Date Format	Click on the desired format for date presentation.
Radix Point	Click on the desired format for number separation (XXX,XXX or XXX.XXX).
Moisture Format	Click on whether the moisture result will be displayed and saved with one decimal point or two.

Temperature Format	Click on whether the measurement results are displayed in Fahrenheit or Celsius.
Test Weight Format	Click on whether the test weight results are displayed in pounds per bushel (lbs/bu) or kilogram per hectoliter (kg/hl).
Cancel	Select to exit the menu with no changes.
Save	Select to save the changes.

Power Management

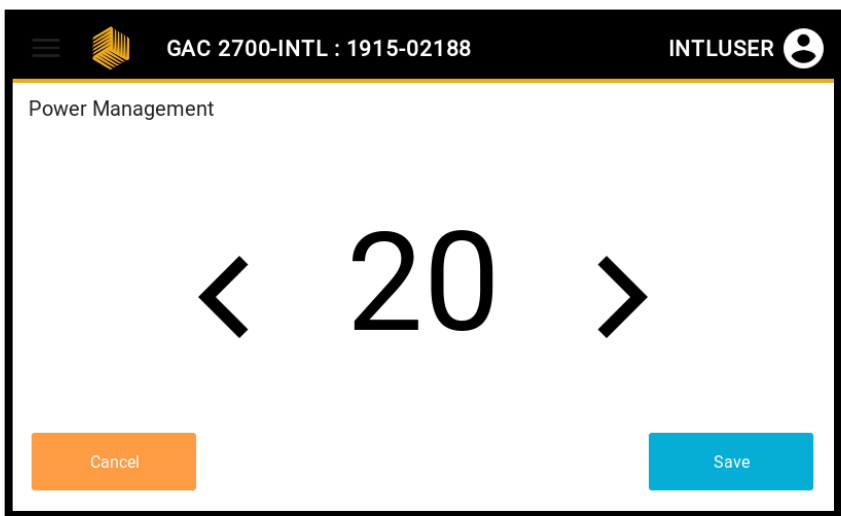

The **GAC™** 2700-INTL moisture tester is equipped with the ability to modify the brightness of the touchscreen in order to provide the clearest visibility to the operator.

Operation	Process to Change the Setting
Left Arrow	< to decrease the screen brightness.
Right Arrow	> to increase the screen brightness.
Cancel	Select to exit the menu with no changes.
Save	Select to save the changes.

Printers

The screenshot shows the 'Printers' configuration screen for the GAC 2700-INTL moisture tester. The interface is titled 'GAC 2700-INTL : 1915-02188' and 'INTLUSER'. Under 'PRINTERS', there are three printer types: RS232 (selected), WebPRNT, and USB. A toggle switch 'This Printer Enabled' is turned on. For the RS232 printer, the following settings are configured: Baud Rate (9600), Byte Size (8), Parity (None), Output Format (CSV), Line Terminator (CRLF), and Stop Bits (1). There are also two checkboxes: 'Automatically Print After Analysis' (checked) and 'Add Line Feeds After Print' (checked). At the bottom, there are buttons for 'Test Print', 'Set Header', 'Set Footer', and a large blue 'SAVE' button.

Notes:

1. It may be necessary to contact the scale system / accounting software vendor to obtain the specific data streaming requirements for this setting.

2. Contact service support at dickey-john.com with any questions regarding printers / data streaming.

The **GAC™** 2700-INTL moisture tester is designed to provide an onscreen moisture measurement result and relevant data to external printers. It can also be configured for third party scale or accounting software programs. Because each application is different, the **GAC™** 2700-INTL moisture tester will need to be configured to the specific output device as required by the end customer.



Currently, the **GAC™** 2700-INTL moisture tester supports two types of printer/data streaming:

1. USB Printing when connecting to a Star SP742 USB Printer.
2. RS232 Printing when connecting to a Star SP742 Serial Printer. In addition to printing, the RS232 port use for data streaming to third party software programs. This capability is accessed using the RS232 port on the back panel of the instrument.

Customers with other printers should check with their dealer / distributor to determine compatibility with the GAC 2700-INTL moisture tester. Steps for connecting to the now deprecated Star 742WebPRNT are included in the manual for completeness but the recommended printer is the Star SP742 USB printer for global languages.



The GAC 2700-INTL moisture tester has been designed to permit data export to two devices at the same time. This is useful for operations that stream the data to a truck scale software program via the RS232 port and to a printer using the USB port. To enable dual export, simply toggle the “This Printer Enabled” button to the On position for both printers.

Operation (General)	Process to Change the Setting
Printer Type	Select whether the GAC™ 2700-INTL moisture tester will communicate results data to the USB printer or an RS232 compatible device.
Test Print	Press this button to test print the data to the output stream.
Set Header	Press this button to enter text that will print on the top of each measurement result.
Set Footer	Press this button to enter text that will print on the bottom of each measurement result.
Cancel	Select to exit the menu with no changes.
Save	Select to save the changes.

Operation (USB)	Process to Change the Setting
This Printer Enabled	Toggle to enable this printer / data streaming device.
Output Format	It is possible to choose between different widths for the print out of measurement results. Choose the desired option from the drop-down box.
Line Terminator	Choose the desired option for the end of the line of the result being sent to the printer. This directs the printer at the point to move to a new line.
Automatically Print After Analysis	Toggle to automatically send the result to the printer after each analysis rather than pressing  on the measurement results screen.
Add Line Feeds After Print	<p>Toggle to direct the printer to add empty lines after each measurement result.</p> <p>Once activated, it is necessary to manually enter a number of blank lines:</p> <ol style="list-style-type: none"> 1. Select the line so that the keyboard is displayed. 2. Select the appropriate number. 3. Press  to save the value.
Cancel	Select to exit the menu with no changes.
Save	Select to save the changes.

Operation (RS232)	Process to Change the Setting
This Printer Enabled	Toggle to enable this printer / data streaming device.
Baud Rate	Select the desired baud rate from the Drop-down menu.
Byte Size	Select the desired byte size from the Drop-down menu.
Parity	Select the desired parity from the Drop-down menu.
Output Format	It is possible to choose between different widths for the print out of measurement results. Choose the desired option from the drop-down box.
Line Terminator	Choose the desired option for the end of the line of the result being sent to the printer. This directs the printer at the point to move to a new line.
Stop Bits	Select the desired stop bits from the Drop-down menu.

WebPRNT instructions below – note that Star has discontinued supporting WebPRNT as of the publishing of this document. The recommended printer is the Star SP742 USB printer for global languages.

Operation (WebPRNT)	Process to Change the Setting
This Printer Enabled	Toggle to enable this printer.
WebPRNT IP Address	<ol style="list-style-type: none"> 1. Manually enter the IP address of the printer that is connected to the network. 2. Select the line and a keyboard will be displayed. 3. Manually enter the IP address using the keyboard. Press  to save the value.
Output Format	It is possible to choose between different widths for the print out of measurement results. Choose the desired option from the drop-down box.
Line Terminator	Choose the desired option for the end of the line of the result being sent to the printer. This directs the printer at the point to move to a new line.
Automatically Print After Analysis	Toggle to automatically send the result to the printer after each analysis rather than pressing the Printer button on the measurement results screen.
Add Line Feeds After Print	<p>Toggle to direct the printer to add empty lines after each measurement result.</p> <p>Once activated, it is necessary to manually enter a number of blank lines:</p> <ol style="list-style-type: none"> 1. Select the line so that the keyboard is displayed. 2. Select the appropriate number. <p>Press  to save the value.</p>
Cancel	Select to exit the menu with not changes
Save	Select to save the changes

Date/Time




The screenshot shows the 'Date/Time' settings interface for the GAC 2700-INTL moisture tester. At the top, the device model 'GAC 2700-INTL : 1915-02188' and the user 'INTLUSER' are displayed. The settings are organized into sections: 'DATE/TIME' with a calendar icon and the date '06/10/2024'; 'TIMEZONE' with a dropdown menu showing 'America/Chicago'; a '24 Hour Format' toggle switch currently turned off; and 'CURRENT TIME' with a clock icon, the time '4:52:48 PM', and 'AM'/'PM' selection buttons. At the bottom, there are 'Cancel' and 'Save' buttons.

Throughout the course of the instrument life, it may be necessary to adjust the date or the time on the **GAC™** 2700-INTL moisture tester so that the measurement is accurately recorded. This screen allows the authorized user to change the date and/or time.



Operation	Process to Change the Setting
Date	<ol style="list-style-type: none"> 1. Press . A calendar is displayed. 2. Select the correct date. 3. Press Close.
Time	<ol style="list-style-type: none"> 1. Press . A clock is displayed. 2. Select the correct time. 3. Select OK.
Cancel	Select to exit the menu with no changes
Save	Select to Save the changes

Owner Information

The **GAC™** 2700-INTL moisture tester permits the user to apply owner information into the instrument memory in order to aid with asset tracking.


Operation	Process to Change the Setting
Owner Name	<ol style="list-style-type: none"> 1. Press on a line and the on-screen keyboard is displayed. 2. Type the necessary information. 3. Press  at the bottom right of the keyboard to exit the keyboard.
Owner Address	<ol style="list-style-type: none"> 1. Press on a line and the on-screen keyboard is displayed. 2. Type the necessary information. 3. Press  at the bottom right of the keyboard to exit the keyboard.
Owner Phone Number	<ol style="list-style-type: none"> 1. Press on a line and the on-screen keyboard is displayed. 2. Type the necessary information. 3. Press  at the bottom right of the keyboard to exit the keyboard.
Cancel	Select to exit the menu with no changes
Save	Select to save the changes


Rapid Analysis Mode

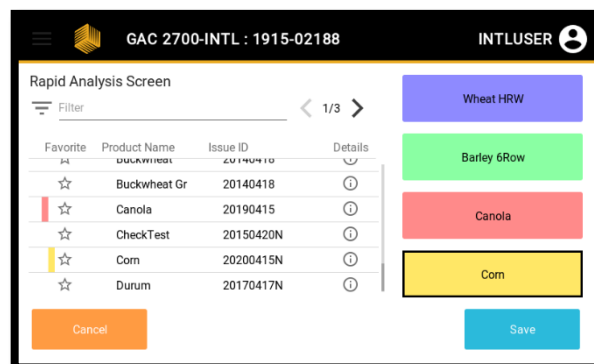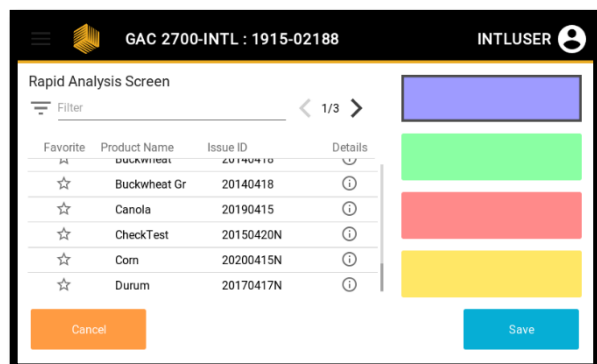

Note: Customized Sample ID and Customer ID are not available in Rapid Analysis Mode.



The **GAC™** 2700-INTL moisture tester features an innovative operational process reducing the time required to conduct a measurement of grain moisture. It also eliminates the need for operators to physically touch the instrument. This process is completely customizable. Operators are able to select the specific grain calibrations displayed on the screen and also the position of those calibrations.

Operation	Process to Change the Setting
Calibration List	The GAC™ 2700-INTL moisture tester will automatically display a list of the calibrations installed on the instrument. The user may need to scroll down the calibration list.
Filter	<ol style="list-style-type: none"> 1. Press on the line for the keyboard to display. 2. Type in the name of the desired grain calibration. 3. Press : The instrument will show calibrations with that name.
Purple Button <i>To replace a grain calibration once it has been tagged to a button, simply press the button once. The grain calibration disappears and a new one can be added.</i>	<ol style="list-style-type: none"> 1. Press to determine which grain will show at the top of the list of calibrations. 2. Select the desired grain calibration. The GAC™ 2700-INTL moisture tester automatically populates the button with the grain name.
Green Button <i>To replace a grain calibration once it has been tagged to a button, simply press the button once. The grain calibration disappears and a new one can be added.</i>	<ol style="list-style-type: none"> 1. Press to determine which grain will be displayed as #2. 2. Select the desired grain calibration. The GAC 2700-INTL moisture tester automatically populates the button with the grain name.
Red Button <i>To replace a grain calibration once it has been tagged to a button, simply press the button once. The grain calibration disappears and a new one can be added.</i>	<ol style="list-style-type: none"> 1. Press to determine which grain will be displayed as #3. 2. Select the desired grain calibration. The GAC 2700-INTL moisture tester automatically populates the button with the grain name.

Yellow Button <i>To replace a grain calibration once it has been tagged to a button, simply press the button once. The grain calibration disappears and a new one can be added.</i>	1. Press to determine which grain will be displayed as #4. 2. Select the desired grain calibration. The GAC™ 2700-INTL moisture tester automatically populates the button with the grain name.
Details	Press  view the calibration Issue ID, Moisture Range, Temperature Range, etc.
Cancel	Select to exit the menu with no changes.
Save	Select to save the changes.

USERS/PASSWORDS

NAVIGATION FROM  SCREEN:

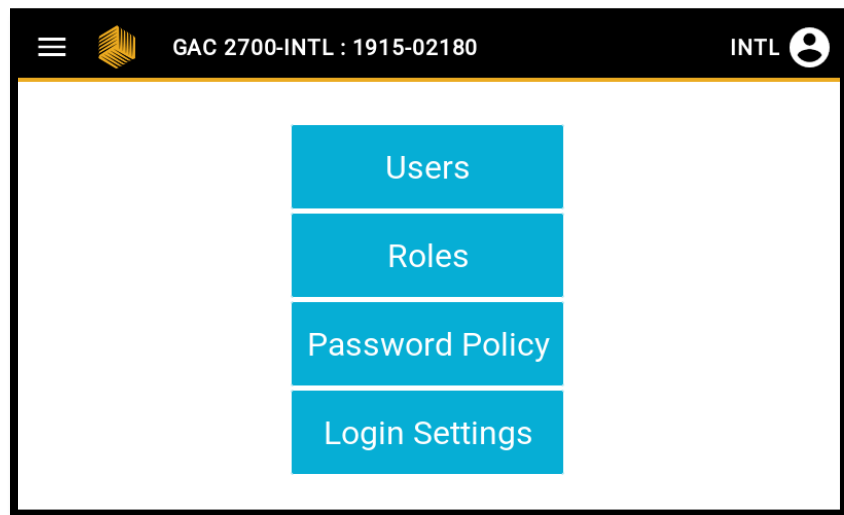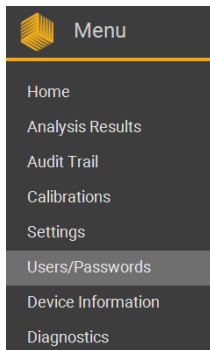

The **GAC™** 2700-INTL moisture tester is designed with the option to have a high level of instrument security, an advanced user/password system, and other preventative measures to keep your operation secure.

The unit is setup with a Default user Admin with no password.

To make the instrument more secure, a password can be setup on the Users/Passwords screen for the Admin who can then be responsible for determining the amount of security enabled on the unit. The Admin can setup additional users and customize access levels for each of them as desired.

With the exception of Password maintenance, edit functionality for the User/Passwords menu is only available to the **GAC™** 2700-INTL moisture tester Admin.

The **GAC™** 2700-INTL moisture tester is equipped with a set of roles with default permissions that allows users to conduct actions on the instrument. These roles are then assigned to users. Users can have multiple roles.

Operation	Description
Users	Press this button to access the User menu to maintain the User list (add, delete), assign roles to users, force user passwords to expire, and create the initial password for users. This menu is only accessible to the Admin.

Roles	Press this button to access the Roles menu to view the various functions that users can alter of the GAC™ 2700-INTL moisture tester settings. Default roles are defined by the region and are shipped with the GAC™ 2700-INTL moisture tester from the factory. This menu is only accessible to the Admin.
Password Policy	Press this button to configure password strength for the various users of the GAC™ 2700-INTL moisture tester. This menu is only accessible to the Admin.

Users

The screenshot displays the 'Users' management interface for the GAC 2700-INTL moisture tester. The top header shows the device ID 'GAC 2700-INTL : 1915-02188' and the current user 'INTLUSER'. The main content area is divided into two panels. The left panel, titled 'Users', lists the available users: 'Admin' and 'INTLUSER'. The right panel, titled 'INTLUSER', provides detailed information about the selected user, including 'Last Date Logged In' (06/10/2024 16:18), 'Last Date User Modified' (06/10/2024 16:18), 'User Created Date' (06/10/2024 16:14), and 'Inactivity Timeout' (0 Minute(s)). Below this information is a 'Roles' section with a grid of role names: 'Administrator', 'TemporaryOperator', 'FieldTechnician', 'TrustedOperator', and 'ServiceTechnician'. There are buttons for 'Reset Roles' and 'Save Roles'. At the bottom of the interface, there are several action buttons: 'Clone User', 'New User', 'Delete User', 'Expire Password', 'Set Password', and 'Back'.

The **GAC™** 2700-INTL moisture tester can be configured for multiple levels of user interaction with the settings that would affect metrology of the instrument. This menu provides the Admin with the ability to configure what pre-defined set of permissions a user would have in the form of roles.

The Admin will use this menu to assign roles with to a specific “User”, which dictates the level of access to the **GAC** 2700-INTL moisture tester for operators. The Admin will also use this menu to add or delete users that have access to operate the **GAC** 2700-INTL moisture tester.

Operation	Description
List of Users	This is an updated list of all the Users that are able to use the GAC 2700-INTL moisture tester. Pressing on a specific name populates the remainder of the screen with the detail and history of that User.

Cancel	Press to erase any changes and revert to the previous page.
Save	Press to save changes.
Clone User	Press this button to copy the roles of a specific user to apply to a new User. A popup box will appear on the screen. Type the name of the new User.
New User	Press this button to create a brand-new User. A popup box will appear on the screen. Type in the name of the new User.
Delete User	To remove a User's access to the GAC™ 2700-INTL moisture tester, the Admin must first select the name from the list of Users. Once the other fields on the screen are populated with the desired User, press this button to remove the User. A popup box will appear on the screen to confirm the deletion process. The Admin will need to press the "Delete" button twice to remove the User.
User Activity	List compiled by the GAC™ 2700-INTL moisture tester that details recent User login activity.
Roles	Admins are able to assign a Role or Roles to each User in this screen. The Role dictates the specific behavior and functionality that the User can have with the GAC™ 2700-INTL moisture tester operation. The specific Roles are defined in the next section of the manual.
Reset Roles	Press this button to Reset the Roles of the User to the level that was setup when the User was created.
Save Roles	Press this button to save any changes made to the Roles that are assigned to a specific User.
Expire Password	Press this button to require the selected User to create a new password.
Set Password	Press this button if the Admin desires to change the Password for a specific User.
Back	Press this button to revert back to the User/Passwords main menu.

Roles

The screenshot displays the 'Roles' configuration interface for the GAC 2700-INTL moisture tester. The interface is divided into two main sections: a list of roles on the left and a grid of permissions on the right. The roles listed are Administrator, FieldTechnician, ServiceTechnician, TemporaryOperator, and TrustedOperator. The permissions listed are View Measurement Result, Browse Measurement History, View Device Info, Take Measurement, Take Measurement Official, Administrate User Accounts, Administrate Roles, Adjust Settings, Clear Measurement Result, Verify System Signatures, Verify Update Package, and Perform Diagnostics. At the bottom, there is a 'Timeout in Minutes' field set to 0, and buttons for New, Delete Role, Save Roles, Reset Roles, and Back.

Roles	Permissions
Administrator	View Measurement Result, Administrate Roles
FieldTechnician	Browse Measurement History, Adjust Settings
ServiceTechnician	View Device Info, Clear Measurement Result
TemporaryOperator	Take Measurement, Verify System Signatures
TrustedOperator	Take Measurement Official, Verify Update Package

Timeout in Minutes: 0

Buttons: New, Delete Role, Save Roles, Reset Roles, Back

The **GAC™** 2700-INTL moisture tester can create preset lists of permissions which are called 'Roles'. These sets of permissions will allow the admin to define whether a specific operator is able to only conduct a moisture measurement, adjust settings, download new software, all of these, none of these, or conduct other interactions with the **GAC™** 2700-INTL moisture tester.

Roles should be tied to the permissions that the Admin desires for specific users in the operational process.

Operation	Description
List of User Types	<p>By Default, there are 5 types of Roles that are attributed to Users of the GAC™ 2700-INTL moisture tester:</p> <ol style="list-style-type: none"> 1. Administrator - Typically a manager of the facility, this Role is responsible to maintain the list of qualified Users. This Role can also perform day-to-day activities on the GAC 2700-INTL moisture tester. 2. Field Technician - This Role can perform all the necessary day-to-day activities on the GAC 2700-INTL moisture tester, including problem solving in the Diagnostics menu. This Role cannot make changes to the User list. 3. Service Technician - Typically this Role is assigned to a dealer/distributor that would perform service, if necessary, in the future. This Role has Read/Write access to the User list. 4. Temporary Operator - Typically a seasonal worker, this Role can only perform operational activity such as conducting measurements, viewing and printing results or the audit trail, etc. 5. Trusted Operator - This Role is a day-to-day User that has full operational activity but adds a permission level to make adjustments to instrument settings, including calibration updating.
Timeout In Minutes	Define the number of minutes of inactivity after which the user will be automatically logged out of the GAC™ 2700-INTL moisture tester. A setting of 0 minutes will disable automatic logout.
List of Roles	<p>This is a list of the behaviors, interactions, and changes that a User Type can make to the GAC™ 2700-INTL moisture tester.</p> <ul style="list-style-type: none"> • Enabled role: Black font • Disabled role: Gray, faded font
Back	Press this button to revert back to the User/Passwords main menu.

Password Policy Menu

The **GAC™** 2700-INTL moisture tester can be configured for multiple options regarding the strictness of passwords if permitted by the governing authority.

Operation	Description
Special Characters Required in Password	Toggle to require the User to Include a minimum of one special character (\$, #, @, etc.) in the password.
Numbers Required in Password	Toggle to require the User to include a minimum of one number (1, 184, 20, etc.) in the password.
Letters Required in Password	Toggle to require the User to include a minimum of one letter (a, t, u, etc.) in the password.
UPPER and lower case Required	Toggle to require the User to include a minimum of one uppercase letter and minimum of one lowercase letter in the password.
Password Length	Modify the minimum and maximum number of characters that a User must include in the password. <i>Note: The minimum number of characters cannot exceed 18 characters.</i>
Password Lifespan	Modify the length of time (days) that the User password is operational in the GAC™ 2700-INTL moisture tester. After the length of time has expired, the next time the user logs into the GAC™ 2700-INTL moisture tester, the User will be instructed to select a new password.

Blank Password Allowed	Toggle if the Admin desires to allow the User to not have to use a password to operate the GAC™ 2700-INTL moisture tester. When this option is selected, it will disable the password requirements as stated above. The Admin is responsible to determine the strictness level for User passwords. <i>Note: Due to security considerations, this may not be permitted in certain countries.</i>
Cancel	Press to erase any changes and revert to the previous page.
Save	Press to save changes. These changes will become effective upon the next power cycle.

If the Admin has implemented requirements for passwords, a popup box will be displayed if a newly created password does not comply with the requirements. An example is in the picture below. The dialogue box will instruct the User which requirements are not met and must be modified in the password. Items in black font are required in the password.



Special characters required
Digits required
Letters required
UPPER & lower case Required
Min length: 5 Max length: 18

Enter a new password:

Cancel
SAVE

DEVICE INFORMATION

NAVIGATION FROM  SCREEN:

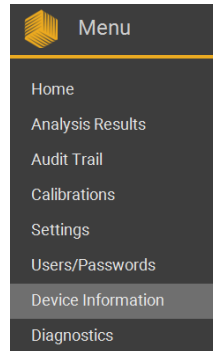
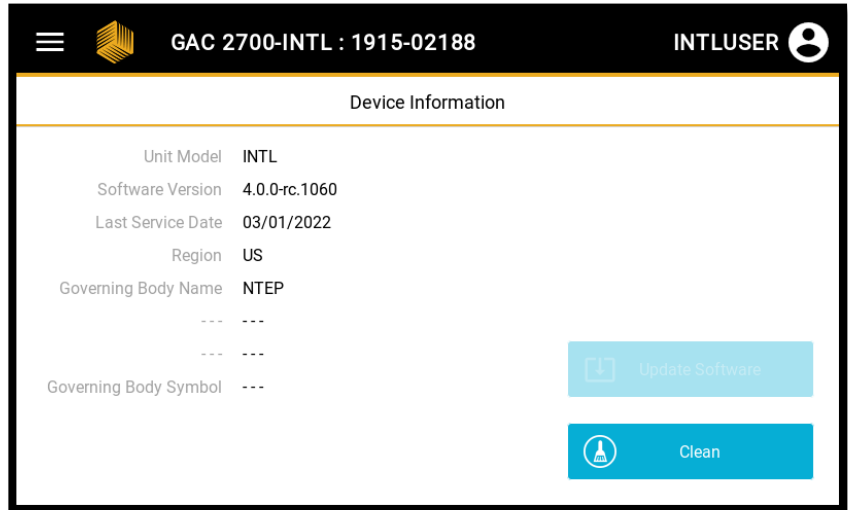



This screen displays the information potentially required during field audits by regulatory agencies. This information is pre-populated either at the factory or by Authorized Service Centers and cannot be changed by end users.

Operation	Description
Unit Model	Specific model number within the GAC™ 2700 moisture tester product platform. Examples include “UGMA” for the United States, “INTL” for international applications, and “AGRI” for producer applications.
Software Versions	Series of digits that indicate the levels of the application software and the firmware software.
Last Service Date	Optional for Authorized Service Centers to enter this information to increase frequency of service intervals.
Region	Region currently being used on the GAC™ 2700-INTL moisture tester.
Certificate #	International regulatory agency to which the specific GAC™ 2700-unit model conforms and governing body name.
Governing Body Symbol	Symbol for governing body

DIAGNOSTICS

NAVIGATION FROM  SCREEN:

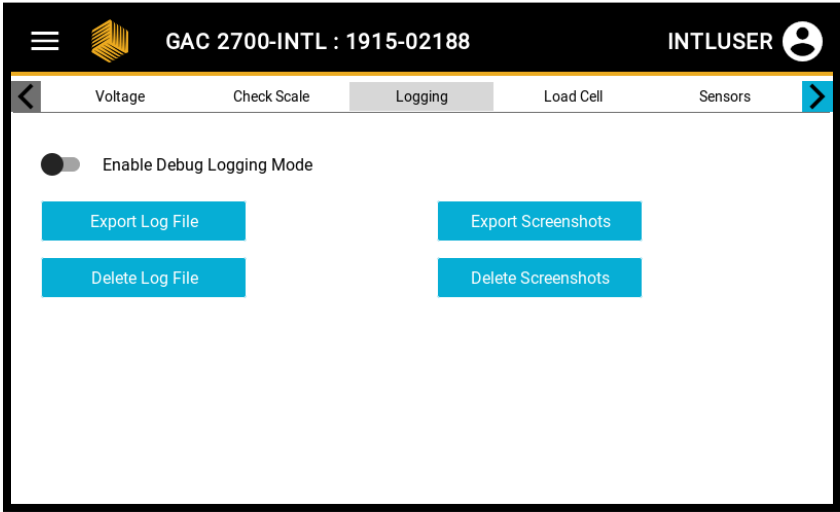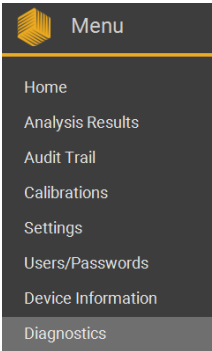

The purpose of this menu is to provide the specific data required by technicians to diagnose, troubleshoot, and resolve issues that may occur on the **GAC™** 2700-INTL moisture tester. This section is only intended for authorized service personnel and cannot be changed or modified by end users.

CLEANING / MAINTENANCE

Note: For customers that require a more extensive cleaning procedure with debris buildup in the cell, contact and schedule your instrument for cleaning with your dealer or Authorized Service Center.

IMPORTANT: It is recommended the unit be regularly inspected and cleaned to ensure continued and consistent results.

For optimum performance, extensive cleaning should be performed weekly or more often, as needed, based on surrounding environmental conditions. Factors such as dust, temperature extremes, grain dust, and external humidity vary from location to location. If there are any questions about the cleanliness or instrument performance, contact your local Authorized Service Center.

Note: The following recommendations are provided as a guideline to maintain a robust and quality operating instrument. It should not be interpreted as an exhaustive maintenance program. Dust and debris may periodically accumulate in areas not specified in this manual. The owner is responsible for ensuring overall equipment cleanliness. If any questions arise regarding the maintenance or performance of the instrument, contact your dealer or local Authorized Service Center.

External Cleaning

NOTICE

The LCD display may require periodic cleaning. Use a commercial cleaner for glass lenses to remove dust.

Do not apply water, organic solvent or chemicals, such as acid and alkali to the LCD display.

The **GAC™** 2700-INTL moisture tester's surface can be cleaned with any cleaner designed for plastic and stainless-steel surfaces. Periodically use a rag to wipe the grain hopper and the (2) upper grain hopper sensors.

Figure 4 Grain Hopper Sensors



Internal Cleaning

Performing continuous tests can result in material accumulation around the critical internal components and adversely affect the measurement.


Two types of cleaning are recommended on an as needed basis:

- Daily clean
- Extensive clean

Daily Clean Method


A daily clean method allows cleaning the cell and door using an automated process. During the cleaning sequence, the hopper door automatically opens.

To start the cleaning process:

1. At the Main Menu screen, press the **Device Information** button.
2. Press .
3. Cleaning mode as active will appear.
4. Remove the grain drawer.
5. Using the supplied brush, manually remove any loose or stuck grain or dust from the measuring cell.
6. Press the **CLOSE** button to return instrument to normal operation.

NOTICE

Hands should be clear from inside the instrument before pressing the CLOSE button.

7. Insert grain drawer.
8. Press  to return to the Home Screen.

Extensive Cleaning Method

Note: For customers that require a more extensive cleaning procedure with buildup in the cell, contact and schedule your instrument for cleaning with your dealer or authorized service center.

The daily cleaning method should be performed first before proceeding to the extensive cleaning method.

IMPORTANT: Extensive cleaning should be performed weekly or more often, as needed, based on surrounding environmental conditions. Factors such as dust, temperature extremes, grain dust, and external humidity vary from location to location. If there are any questions about the cleanliness or instrument performance, contact your local authorized service center.

Tool required for internal mechanism cleaning:

- Brush p/n 206410003 (included with instrument)

Extensive cleaning of the instrument involves two steps to ensure optimum instrument performance:

1. Internal mechanism cleaning
2. Temperature sensor probe cleaning

To Clean the Instrument:

1. Power down the instrument.

Figure 5 Power Down



2. Unplug power cord.

Figure 6 Unplug Power Cord



3. Remove other accessory cords (USB and printer).

Figure 7 Remove Accessory Cords




4. Remove grain drawer.

Figure 8 Remove Grain Drawer



5. Place the instrument on its back side.

Figure 9 Place Instrument on Back Side

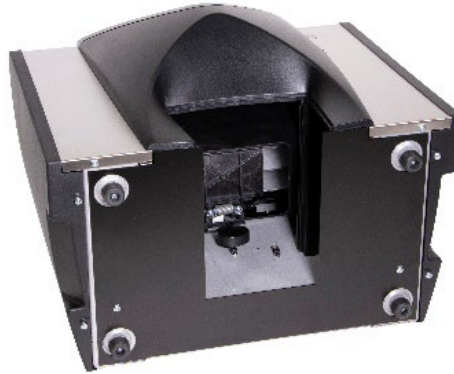


6. Manually pull down on trap door.

Figure 10 Pull Down on Trap Door



7. Clean surfaces around measurement cell including hinge, trap door, and edge of cell with the supplied brush.

Figure 11 Clean Surface Area around Cell, Hinge, Trap Door, Edge of Cell

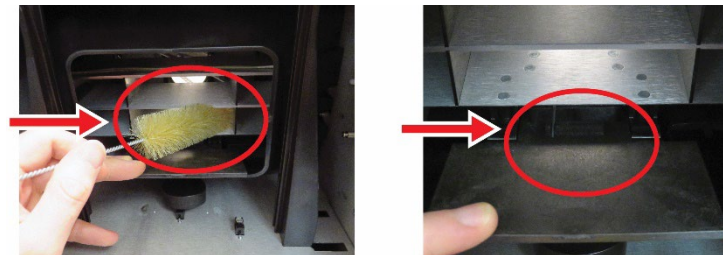

8. Close the trap door and clean hinge under trap door with brush.

Figure 12 Clean Under Trap Door



9. Proceed to instruction for cleaning the temperature sensor probe.

Cleaning the Temperature Sensor Probe

IMPORTANT: Any particles in front of the sensor's optics can affect measurement performance. Therefore, it is crucial to sufficiently clean the sensor. For excessive dust and/or foreign material buildup on or around the temperature sensor, it is recommended the instrument be returned to DICKEY-john® Service or authorized service center.

The temperature sensor may require cleaning due to dust buildup and/or foreign material that has collected around the sensor that could potentially cause temperature error readings during analysis. Temperature sensor cleaning should be performed weekly or more often, as needed, based on surrounding environmental conditions. Factors such as dust, temperature extremes, grain dust, and external humidity vary from location to location. It is important the temperature sensor is visually inspected and cleaned each time a regular maintenance check of the instrument is conducted. If there are any questions about the cleanliness or instrument performance, contact your local authorized service center.

Tools required for cleaning the temperature sensor probe:

1. Standard 6" long cotton swab
(i.e. McMaster-Carr p/n 7074T12)
2. 99% Isopropyl Alcohol
3. 10" flat head screw driver

TEMPERATURE SENSOR LOCATION

With the instrument placed upside down and looking inside the instrument, the sensor probe is located in the middle of the instrument toward the top and front attached to a circuit board.

Figure 13 Sensor Probe Location



To Clean the IR Temperature Sensor:


1. Gently place instrument upside down.

Figure 14 Place Instrument Upside Down




2. Carefully place the head of the screw driver (10" length recommended) at the bristles and use a sweeping side-to-side motion through the entire length of the bristles no fewer than three times.

Figure 15 Cleaning the Brush Assembly

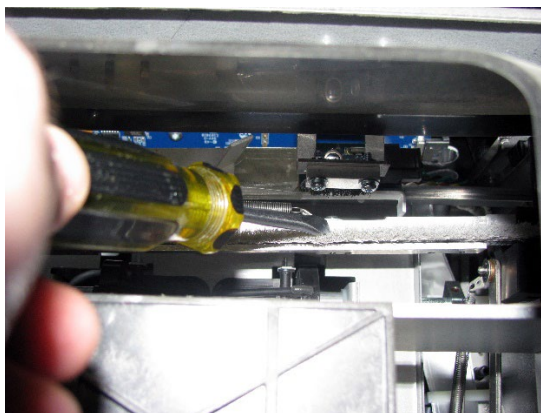

3. Select the appropriate cotton swab as described.
Wet one end of the cotton swab with 99% Isopropyl alcohol.
4. Swab method for cleaning sensor:
 - Gently clean the entire IR temperature sensor surface with the wet end of the cotton swab as depicted in (Figure 16).

Figure 16 Magnified View of Proper Cleaning with Cotton Swab

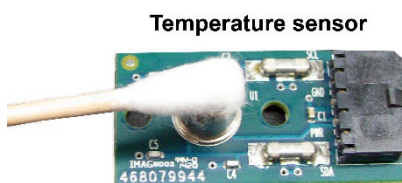

5. Allow the temperature sensor to dry for 90 seconds then gently clean with the dry end of the cotton swab.
6. Visually inspect the temperature sensor as well as all other areas cleaned to ensure the instrument is free from debris. If there is any question about the cleanliness of the instrument, it should be returned to a dealer or authorized service center.
7. If cleaning is acceptable, return instrument to upright position and replace the drawer.
8. Reconnect power cable and accessory cords.
9. Power on instrument.

IMPORTANT: The foregoing recommendations are provided as a guideline to maintain a robust and quality operating **GAC™ 2700-INTL** moisture tester. It should not be interpreted as an exhaustive maintenance program. Dust and debris may periodically accumulate in areas not specified in this manual. The owner is responsible for ensuring overall equipment cleanliness. If any questions arise regarding the maintenance or performance of the instrument, contact your dealer or local authorized service center.

TROUBLESHOOTING

The **GAC™ 2700-INTL** moisture tester utilizes an RF frequency of 149 MHz to make measurements within the machine. It is not a strong signal strength. If potential interference is determined to originate from the **GAC™ 2700-INTL** moisture tester simple corrective steps can be taken; move the products further apart from each other, re-orientate the products to each other.

ERROR CODE	ERROR	PROBABLE CAUSE	CORRECTIVE ACTION
1	Empty Cell Measurement Out of Spec	Moisture or dirt buildup in cell.	Dump grain and verify cell is clean and free of grain in and surrounding the cell.
2	Empty Cell Weight Out of Spec	Empty cell measurement is out of tolerance.	Ensure shipping brackets have been moved to the Unlocked position. Dump grain and verify cell is clean and free of grain in and surrounding the cell.
3	No Products Installed	No product calibrations were found on the machine.	Install product calibration files.
4	Fill Motor Jammed	The motor has stalled while loading grain from a possible obstruction.	Clear blockage from cell.
5	Invalid Grain Calibration File	An invalid calibration file was selected.	Re-install the selected calibration file.
6	Moisture Too High	Measured product is above the moisture upper limit of the calibration.	Verify sample filled the cell.
7	Moisture Too Low	Measured product is below the moisture lower limit of the calibration.	Verify sample filled the cell.
8	Instrument Low Temp Limit Exceeded	Instrument temperature is less than the allowed limit of 2 degrees C.	Move unit to a warmer environment or allow to warm up.
9	Grain High Temp Limit Exceeded	Grain temperature has exceeded the grain calibration specification to analyze grain.	Allow grain to cool and then re-analyze.
10	Grain Low Temp Limit Exceeded	Grain temperature has exceeded the grain calibration specification to analyze grain.	Allow grain to warm and then re-analyze.
11	Sample Weight Too High	Test weight is greater than the range specified for the calibration selected.	Use a more representative sample and re-analyze grain. Verify correct grain calibration is selected.
12	Sample Weight Too Low	Test weight is lower than the range specified for the calibration selected.	Use a more representative sample and re-analyze grain. Verify correct grain calibration is selected.
13	No Communication	An internal communication failure has occurred and communication has been lost.	Power unit off and turn back on to reset.
14	Instrument High Temp Limit Exceeded	Instrument temperature is higher than the allowed limit of 45 degrees C.	Check unit ventilation or move to a cooler environment.
15	Unit to Grain Differential	The difference between grain temperature and machine temperature has exceeded the unit specification to analyze grain.	Allow grain and machine temperature to equalize and then re-analyze.
16	Internal Power Supply Out of Spec	Unit internal voltage is out of specification.	Service is required. Contact service support at dickey-john.com .
17	Unable to Predict Moisture	A corrupt instrument calibration file or other unexpected error.	Dump sample and re-analyze.
18	Pre-Analysis Timeout	Power unit off and turn back on to reset.	Contact service support at dickey-john.com if problem persists.

21	Language Import Error	An unexpected language file i/o error has occurred.	Confirm you have correctly selected the language file on your USB drive. If necessary, Contact service support at dickey-john.com to procure a new language file.
22	Language Loading Error	An unexpected error has occurred when loading a previously imported language.	Contact service support at dickey-john.com if problem persists.
23	Region Loading Error	An unexpected error has occurred when loading a previously imported language	Contact service support at dickey-john.com.
24	Region File Missing	A region name is not present in imported Region file	Contact service support at dickey-john.com.
25	Region File Parsing Error	An error has occurred while attempting to load a locale.	Contact service support at dickey-john.com.
50	Weight Measurement Device Error	An error has occurred with the load cell.	Power unit off and turn back on to reset. Service unit if failure continues.
52	Date/Time Incorrect	The programmed machine date is less than expected.	Program the instrument date and time. If problem persists, then the battery backup for the internal clock may need to be replaced. Contact service support at dickey-john.com.
53	Cold Sample Moisture Too High	The sample is too high in moisture to accurately read at its current temperature.	Warm the sample above the low temperature threshold specified in the product calibration file and rerun the measurement.
56	I/O Board Power Off Error	Power unit off and turn back on to reset.	Contact service support at dickey-john.com if problem persists.
60	Network Unavailable	Confirm network cables are properly connected.	Verify the network settings are correct.
63	Realtime Moisture Measurement Error	The motor and/or brush has stalled due to a possible obstruction.	Dump the sample using the Abort button on the home screen and clear blockage from cell; re-analyze.
69	Moisture Result Checksum Failed	Results in the database have been corrupted.	Delete the measurement result(s) causing the error from the Analysis Results page. If error persists, contact service support at dickey-john.com.
100	Unexpected Application Crash	The application has encountered an unexpected error.	Press the Initiate (green) button or cycle power to reboot the instrument. If problem persists, contact service support at dickey-john.com.
999	Realtime Error Alert	The measurement cycle failed to complete.	Dump the sample using the Abort button on the home screen; re-analyze.

DICKEY-john® WARRANTY

Dealers have the responsibility of calling to the attention of their customers the following warranty prior to acceptance of an order from their customer for any DICKY-john® product.

DICKEY-john® warrants to the original purchaser for use that, if any part of the product proves to be defective in material or workmanship within one year from date of original installation, and is returned to DICKY-john within 30 days after such defect is discovered, DICKY-john will (at our option) either replace or repair said part. This warranty does not apply to damage resulting from misuse, neglect, accident, or improper installation or maintenance; any expenses or liability for repairs made by outside parties without DICKY-john's written consent; damage to any associated equipment; or lost profits or special damages. Said part will not be considered defective if it substantially fulfills the performance expectations. **THE FOREGOING WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES OF MERCHANTABILITY, FITNESS FOR PURPOSE, AND OF ANY OTHER TYPE, WHETHER EXPRESS OR IMPLIED.** DICKY-john neither assumes nor authorizes anyone to assume for it any other obligation or liability in connection with said part and will not be liable for consequential damages. Purchaser accepts these terms and warranty limitations unless the product is returned within fifteen days for full refund of purchase price.

Operator's Manual

GAC™ 2700-INTL Grain Analysis Computer

