

# GAC™ 2700-LF

## Moisture Tester

### Get Accurate, Rapid Results Every Time NEW FOR THE NUT INDUSTRY

DICKEY-john®, a trusted partner in moisture detection for nearly a half of a century, is pleased to offer the GAC™ 2700-LF moisture tester built for the nut industry. Building on the history of the GAC™ 2100, the GAC 2700-LF integrates easily into your operation to ensure that you are receiving the information you need in order to achieve optimum profitability for your operation. Moisture and temperature results are provided for both the stand-alone instrument or integrated system software solutions.

#### Features and Benefits:

- Utilizes 149 MHz technology, developed by the USDA
- Measurement results in less than 20 seconds, allowing more samples to be run during your busiest seasons
- Integrated system software solution capabilities
- Large 7" touch screen display for greater visibility and responsiveness
- Improved processing provides shorter analysis time allowing more samples to be run during your busiest seasons
- Modern, intuitive operator interface simplifies training and daily operation
- Memory storage for up to 5,000 measurements
- Multiple USB ports on the front and back of the unit for software upgrades, USB devices, printer and peripherals
- Bar code scanner capability to expedite processing time
- Ergonomically designed drawer handle reduces operator fatigue
- Advanced security features, adding layers of protection to commercial transactions



# GAC™ 2700-LF

## Moisture Tester

### Calibrations:

With the rich experience in the industry, DICKEY-john® understands the need to tailor the requirements of your region and operation based on the specific application.

- Best-in-class support backed by DICKEY-john's calibration laboratories
- Convenient, easy-to-download calibrations available on [www.dickey-john.com](http://www.dickey-john.com)
- Custom calibration development available for unique crop and region attributes

### Backed by the power of DICKEY-john:


When you buy a DICKEY-john GAC™ 2700-LF you get all the dependability and value you expect from DICKEY-john® products. Like all DICKEY-john products, the GAC 2700-LF is designed and manufactured in the USA, and supported worldwide.

### Specifications

<b>Operating temperature</b>	36°F to 113°F (2°C to 45°C)
<b>Power</b>	110/220V, 50/60 Hz, 30/35 VA
<b>Humidity</b>	20 to 90% non-condensing
<b>Grain temperature</b>	-4°F to +113°F (-20°C to +45°C) depending on grain calibrations
<b>Storage/transit temperature</b>	-4°F to +140°F (-20°C to +60°C)
<b>Moisture range</b>	5 to 45% (grain dependent)
<b>Approximate Weight</b>	25 lbs. (11.43 kg)
<b>Approximate dimensions</b>	17"H x 19"W x 14"D (43.18cm H x 48.26cm W x 35.56 cm D)
<b>Languages</b>	English



Intuitive Color  
Touchscreen

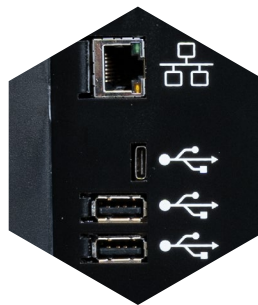

Multiple Back  
USB Ports



Easy-to-Read  
Results Screen